


Terminal Extractor Tool Instruction Sheet Order No. 63813-1900

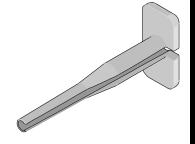

FEATURES


This Extractor Tool is for the removal of pin and socket terminals from sealed plug and receptacle assemblies.


SCOPE

Products: Contact Pins and Hooded Sockets, 16-18 AWG.


Terminal Series No.	Terminal Order No.			
84590	84590-0020	84590-0025	84590-0026	84590-0031

 
OPERATION:

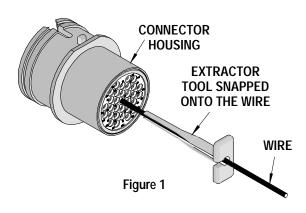



- 2. Slide the tool along the wire and into the connector housing. As the tool enters the housing, do not twist the tool or insert it at an angle.
- 3. Continue to push the tool into the housing until it engages the contact and resistance is felt. See Figure 2.
- 4. While holding the wire against the Extractor Tool, gently pull the wire, tool, and contact out of the connector. If the contact cannot be pulled back, the Extractor Tool needs to be pushed farther into the connector to fully release the latches. See Figure 3.

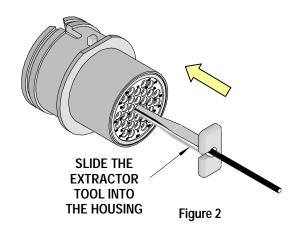

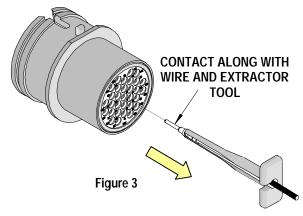

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638131900 Release Date: 02-11-08 **UNCONTROLLED COPY** Page 1 of 1 Revision: A Revision Date: 02-11-08