

T-1(3mm) ROUND BI-COLOR LED LAMP

Part Number: WP937EGW

High Efficiency Red

Features


- UNIFORM LIGHT OUTPUT.
- LOW POWER CONSUMPTION.
- I.C. COMPATIBLE.
- LONG LIFE SOLID STATE RELIABILITY.
- RoHS COMPLIANT.

Description

The High Efficiency Red source color devices are made with Gallium Arsenide Phosphide on Gallium Phosphide Orange Light Emitting Diode.

The Green source color devices are made with Gallium Phosphide Green Light Emitting Diode.

Package Dimensions

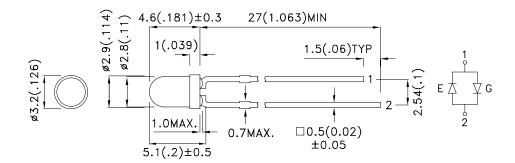

- 1. All dimensions are in millimeters (inches).
- 2. Tolerance is $\pm 0.25(0.01")$ unless otherwise noted.
- 3. Lead spacing is measured where the leads emerge from the package.4. Specifications are subject to change without notice.





SPEC NO: DSAF1535 **REV NO: V.3 DATE: MAY/11/2007 PAGE: 1 OF 7** CHECKED: Allen Liu APPROVED: WYNEC DRAWN: Y.L.LI ERP: 1101008548

Selection Guide

Part No.	Dice	Lens Type	lv (mcd) [2] @ 20mA		Viewing Angle [1]
		,.	Min.	Тур.	201/2
WD037ECW	High Efficiency Red (GaAsP/GaP)	WHITE DIEFLISED	7	20	- 60°
WP937EGW	Green (GaP)	WHITE DIFFUSED	7	16	

- 1. 01/2 is the angle from optical centerline where the luminous intensity is 1/2 the optical centerline value.
 2. Luminous intensity/ luminous Flux: +/-15%.

Electrical / Optical Characteristics at TA=25°C

Symbol	Parameter	Device	Тур.	Max.	Units	Test Conditions
λpeak	Peak Wavelength	High Efficiency Red Green	627 565		nm	IF=20mA
λD [1]	Dominant Wavelength	High Efficiency Red Green	625 568		nm	I=20mA
Δλ1/2	Spectral Line Half-width	High Efficiency Red Green	45 30		nm	I=20mA
С	Capacitance	High Efficiency Red Green	15 15		pF	VF=0V;f=1MHz
VF [2]	Forward Voltage	High Efficiency Red Green	2 2.2	2.5 2.5	V	I=20mA


- 1.Wavelength: +/-1nm.
- 2. Forward Voltage: +/-0.1V.

Absolute Maximum Ratings at TA=25°C


Parameter	High Efficiency Red	Green	Units		
Power dissipation	75	62.5	mW		
DC Forward Current	30	25	mA		
Peak Forward Current [1]	160	140	mA		
Operating / Storage Temperature	-40°C To +85°C				
Lead Solder Temperature [2]	260°C For 3 Seconds				
Lead Solder Temperature [3]	260°C For 5 Seconds				


- 1. 1/10 Duty Cycle, 0.1ms Pulse Width.
 2. 2mm below package base.
 3. 5mm below package base.


SPEC NO: DSAF1535 **REV NO: V.3** DATE: MAY/11/2007 PAGE: 2 OF 7 APPROVED: WYNEC **CHECKED: Allen Liu** DRAWN: Y.L.LI ERP: 1101008548

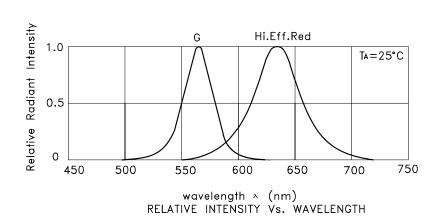



WP937EGW High Efficiency Red

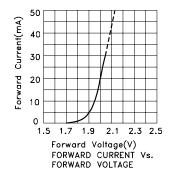

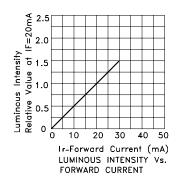

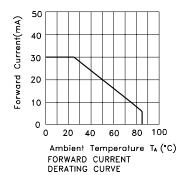

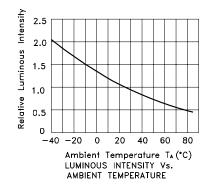


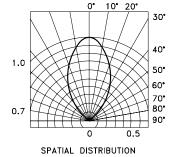



 SPEC NO: DSAF1535
 REV NO: V.3
 DATE: MAY/11/2007
 PAGE: 3 OF 7


 APPROVED: WYNEC
 CHECKED: Allen Liu
 DRAWN: Y.L.LI
 ERP: 1101008548


Green

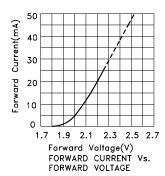

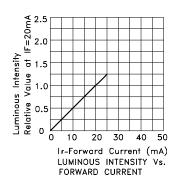

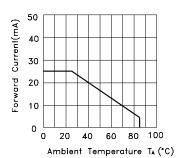

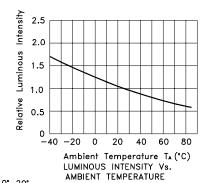




7 40°
50°
60°
70°
80°
90°
SPATIAL DISTRIBUTION

10° 20°


SPEC NO: DSAF1535 APPROVED: WYNEC REV NO: V.3 CHECKED: Allen Liu DATE: MAY/11/2007 DRAWN: Y.L.LI PAGE: 4 OF 7 ERP: 1101008548

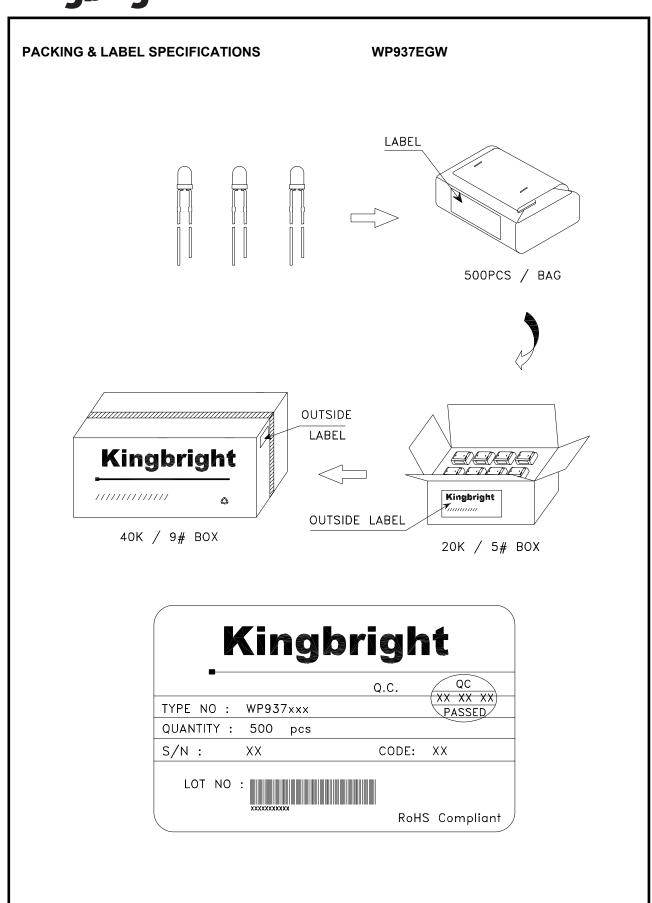

SPEC NO: DSAF1535 APPROVED: WYNEC REV NO: V.3 CHECKED: Allen Liu DATE: MAY/11/2007 DRAWN: Y.L.LI PAGE: 5 OF 7 ERP: 1101008548


LED MOUNTING METHOD

1. The lead pitch of the LED must match the pitch of the mounting holes on the PCB during component placement. Lead—forming may be required to insure the lead pitch matches the hole pitch. Refer to the figure below for proper lead forming procedures.

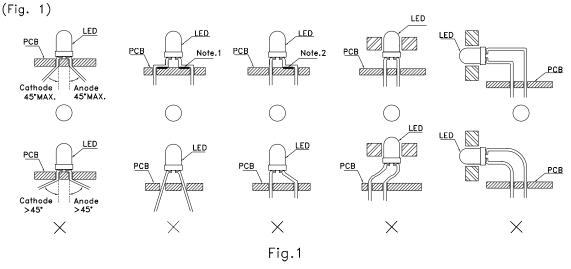


" \bigcirc " Correct mounting method " \times " Incorrect mounting method Note 1-2: Do not route PCB trace in the contact area between the leadframe and the PCB to prevent short-circuits.

2. When soldering wire to the LED, use individual heat—shrink tubing to insulate the exposed leads to prevent accidental contact short—circuit. (Fig. 2)




3. Use stand—offs (Fig. 3) or spacers (Fig. 4) to securely position the LED above the PCB.

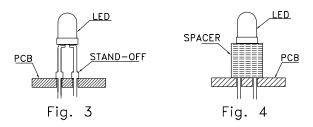


SPEC NO: DSAF1535 APPROVED: WYNEC REV NO: V.3 CHECKED: Allen Liu DATE: MAY/11/2007 DRAWN: Y.L.LI PAGE: 6 OF 7 ERP: 1101008548

LEAD FORMING PROCEDURES


1. Maintain a minimum of 2mm clearance between the base of the LED lens and the first lead bend. (Fig. 5 and 6)

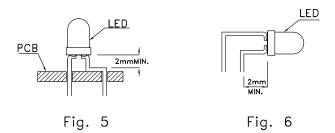

- 2. Lead forming or bending must be performed before soldering, never during or after Soldering.
- 3. Do not stress the LED lens during lead—forming in order to fractures in the lens epoxy and damage the internal structures.
- 4. During lead forming, use tools or jigs to hold the leads securely so that the bending force will not be transmitted to the LED lens and its internal structures. Do not perform lead forming once the component has been mounted onto the PCB. (Fig. 7)
- 5. Do not bend the leads more than twice. (Fig. 8)

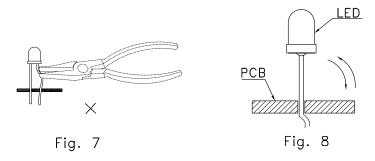

6. After soldering or other high—temperature assembly, allow the LED to cool down to 50°C before applying outside force (Fig. 9). In general, avoid placing excess force on the LED to avoid damage. For any questions please consult with Kingbright representative for proper handling procedures.

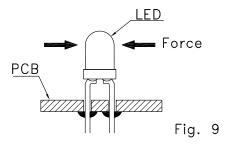

 SPEC NO: DSAF1535
 REV NO: V.3
 DATE: MAY/11/2007
 PAGE: 7 OF 7

 APPROVED: WYNEC
 CHECKED: Allen Liu
 DRAWN: Y.L.LI
 ERP: 1101008548