CS0123 Series


Snap Screw Set

The Screw Snap Set from Transforming Technologies easily installs onto multi-layer rubber or vinyl with a conductive inner layer. The set provides a 10mm stud for grounding of table mats.



How to Install Snap Screw Sets

- 1. Place ESD matting on workstation. Locate the safest, and most convenient grounding point (outlet).
- 2. Choose which side of the mat has the closest or most convenient access to the grounding point.
- 3. Locate an area 1 –2 inches in from each corner of the mat on the side determined in step 2.
- 4. Make a hole in the mat large enough for the screw to slide through.
- 5. Place the stud onto screw and turn clockwise until the stud is flush with the ESD mat.

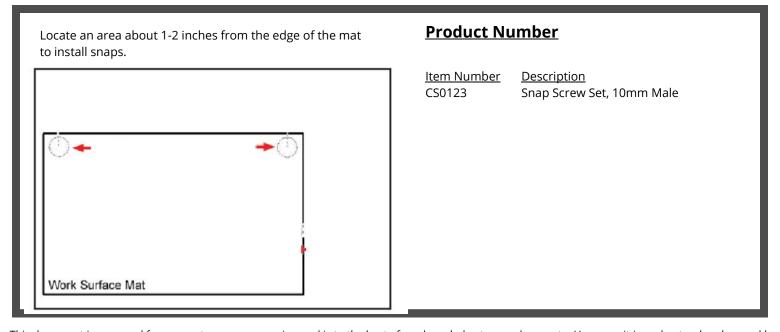

This document is prepared for our customers as a service, and is to the best of our knowledge true and accurate. However, it is understood and agreed by the users of this document that we will accept no liability for the conclusions reached. Users of this document may therefore wish to perform additional testing before determining that products mentioned are suitable.