



SERIES 76

SPST Rocker

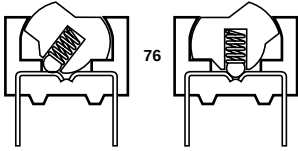


FEATURES

- Raised and Recessed, Rocker and PIANO-DIP® Styles
- Sealed Base Standard
- Spring and Ball Contact
- Top Tape Seal Option

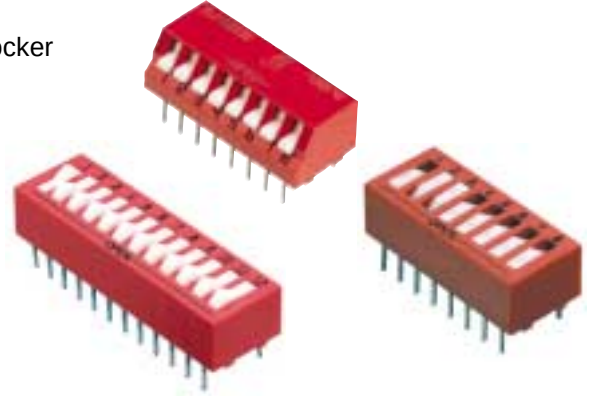


DIMENSIONS In inches (and millimeters)


Rocker and Recessed Rocker

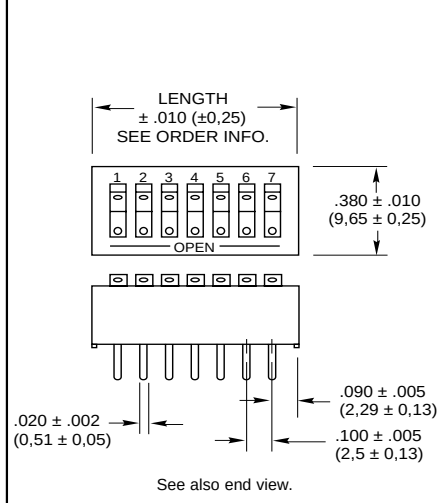

Side Actuated PIANO-DIP®

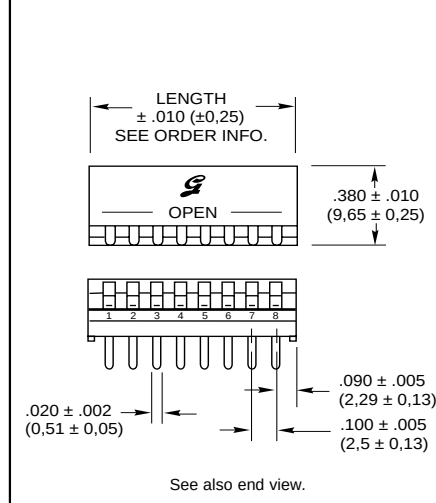


PIANO-DIP®

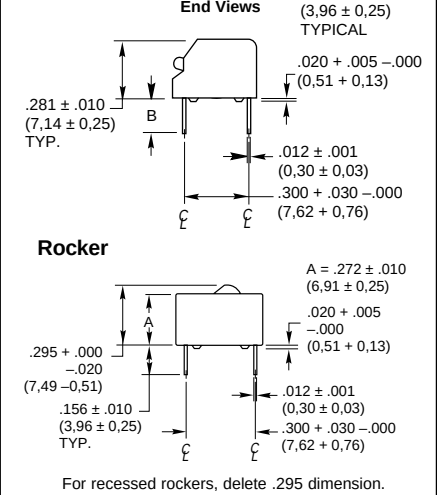


CIRCUITRY

Styles 76SB and 76RSB




Typical circuit diagram with actuator as shown in the dimension drawing.

Style 76PSB UP IS OPEN (OFF)



Actuator shown in the up position.

Styles 76PRB UP IS CLOSED (ON)



Actuator shown in the up position.

ORDERING INFORMATION

Series
Switch Style: SB = Raised Rocker
RSB = Recessed Rocker
PSB = Piano-DIP (Up is Off)
PRB = Piano-DIP (Up is On)

76RSB04S

Seal*: S = Tape Seal
Blank = No Seal

Number of Positions: 02 through 10, 12

No. of Pos.	Length (Inches)	Length (Metric)	No./Tube
2	0.280"	7,1 mm	35
3	0.380"	9,7 mm	27
4	0.480"	12,2 mm	21
5	0.580"	14,7 mm	18
6	0.680"	17,3 mm	15
7	0.780"	19,8 mm	13
8	0.880"	22,4 mm	12
9	0.980"	24,9 mm	10
10	1.080"	27,4 mm	9
12	1.280"	32,5 mm	8

*A top tape seal is required for switches that are machine soldered or heavily cleaned after hand soldering. To order top seal versions, add "S" to the Grayhill part number.

For Specifications, see page B-14.
For Options and Accessories, see page B-20.

Available from your local Grayhill Distributor.
For prices and discounts, contact a local Sales Office, an authorized local Distributor or Grayhill.