## Digital PWM Current-Mode Controller for AC/DC LED Driver

## **1.0 Features**

- Primary-side feedback eliminates opto-isolators and simplifies design
- Quasi-resonant operation for highest overall efficiency
- EZ-EMI <sup>®</sup> design to easily meet global EMI standards
- Up to 130 kHz switching frequency enables small adapter size
- Very tight LED constant current regulation
- No external compensation components required
- Built-in output constant-current control with primary-side feedback for LED driver.
- Low start-up current (10 µA typical)
- Built-in soft start
- Built-in short circuit protection and output overvoltage protection
- Current sense resistor short protection
- Overtemperature Protection
- Open circuit protection
- Universal input range from 85 V<sub>ac</sub> to 264 V<sub>ac</sub>
- Single-fault protection
- Small input bulk capacitor
- Long MTBF
- High efficiency

# **2.0 Description**

The iW3620 is a high performance AC/DC offline LED driver which uses digital control technology to build peak current mode PWM flyback power supplies. The device operates in quasi-resonant mode at heavy load to provide high efficiency along with a number of key built-in protection features while minimizing the external component count, simplifying EMI design and lowering the total bill of material cost. The iW3620 removes the need for secondary feedback circuitry while achieving excellent line and load regulation. It also eliminates the need for loop compensation components while maintaining stability over all operating conditions. Pulse-bypulse waveform analysis allows for a loop response that is much faster than traditional solutions, resulting in improved dynamic load response. The built-in current limit function enables optimized transformer design in universal off-line applications over a wide input voltage range.

## **3.0 Applications**

• LED lighting

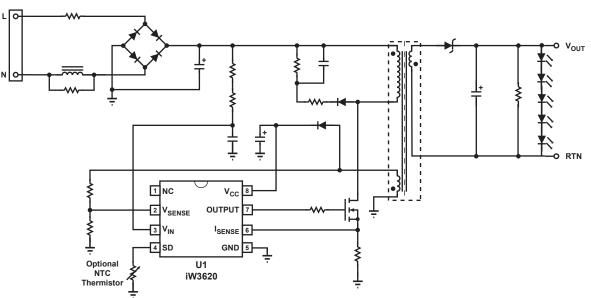



Figure 3.1 : Typical Application Circuit



## Digital PWM Current-Mode Controller for AC/DC LED Driver



# **4.0 Pinout Description**

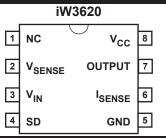

Pin #	Name	Туре	Pin Description	
1	NC	-	No connection.	
2	V <sub>SENSE</sub>	Analog Input	Auxiliary voltage sense (used for primary side regulation).	
3	V <sub>IN</sub>	Analog Input	Rectified AC line average voltage sense.	
4	SD	Analog Input	External shutdown control. Connect to ground through a resistor if not used. (see Section 10.16)	
5	GND	Ground	Ground.	
6	I <sub>SENSE</sub>	Analog Input	Primary current sense (used for cycle-by-cycle peak current control and limit).	
7	OUTPUT	Output	Gate drive for external MOSFET switch.	
8	V <sub>cc</sub>	Power Input	Power supply for control logic and voltage sense for power-on reset circuitry.	

## Digital PWM Current-Mode Controller for AC/DC LED Driver



## **5.0 Absolute Maximum Ratings**

Absolute maximum ratings are the parameter values or ranges which can cause permanent damage if exceeded. For maximum safe operating conditions, refer to Electrical Characteristics in Section 6.0.

Parameter	Symbol	Value	Units
DC supply voltage range (pin 8, I <sub>CC</sub> = 20mA max)	V <sub>cc</sub>	-0.3 to 18	V
DC supply current at V <sub>CC</sub> pin	I <sub>cc</sub>	20	mA
Output (pin 7)		-0.3 to 18	V
V <sub>SENSE</sub> input (pin 2, I <sub>Vsense</sub> ≤ 10 mA)		-0.7 to 4.0	V
V <sub>IN</sub> input (pin 3)		-0.3 to 18	V
I <sub>SENSE</sub> input (pin 6)		-0.3 to 4.0	V
SD input (pin 4)		-0.3 to 18	V
Power dissipation at T <sub>A</sub> ≤ 25°C	P <sub>D</sub>	526	mW
Maximum junction temperature	T <sub>J MAX</sub>	125	°C
Storage temperature	T <sub>STG</sub>	–65 to 150	°C
Lead temperature during IR reflow for $\leq$ 15 seconds	T <sub>LEAD</sub>	260	°C
Thermal Resistance Junction-to-PCB Board Surface Temperature	ψ <sub>JB</sub> (Note 1)	70	°C/W
ESD rating per JEDEC JESD22-A114		2,000	V
Latch-Up test per JEDEC 78		±100	mA

#### Notes:

Note 1.  $\psi_{JB}$  [Psi Junction to Board] provides an estimation of the die junction temperature relative to the PCB [Board] surface temperature. This data is measured at the ground pin (pin 5) without using any thermal adhesives. See Section 9.14 for more information.

## Digital PWM Current-Mode Controller for AC/DC LED Driver



## **6.0 Electrical Characteristics**

 $V_{cc}$  = 12 V, -40°C ≤  $T_A$  ≤ 85°C, unless otherwise specified (Note 1)

Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit
V <sub>IN</sub> SECTION (Pin 3)						
Start-up low voltage threshold $(V_{IN\_A})$ at internal ADC input (see Figure 8.1) (Note 2)	V <sub>IN_A(STLOW)</sub>	$T_A = 25^{\circ}C$ , positive edge	335	369	406	mV
Start-up low voltage threshold (V $_{\rm IN})$	V <sub>IN(STLOW)</sub>		363	413	477	mV
Start-up current	I <sub>INST</sub>	$V_{IN}$ = 10 V, $C_{VCC}$ = 10 $\mu$ F		10	15	μA
Input impedance	Z <sub>IN</sub>	After start-up		5		kΩ
V <sub>SENSE</sub> SECTION (Pin 2)						
Input leakage current	I <sub>BVS</sub>	V <sub>SENSE</sub> = 2 V			1	μA
Nominal voltage threshold	V <sub>SENSE(NOM)</sub>	T <sub>A</sub> =25°C, negative edge	1.523	1.538	1.553	V
Output OVP threshold (Note 2)	V <sub>SENSE(MAX)</sub>	$T_A = 25^{\circ}C$ , negative edge	1.790	1.846	1.900	V
OUTPUT SECTION (Pin 7)						
Output low level ON-resistance	R <sub>DS(ON)LO</sub>	I <sub>SINK</sub> = 5 mA		40		Ω
Output high level ON-resistance	R <sub>DS(ON)-HP</sub>	I <sub>SOURCE</sub> = 5 mA		75		Ω
Rise time (Note 2)	t <sub>R</sub>	$T_A = 25^{\circ}C, C_L = 330 \text{ pF}$ 10% to 90%		200	300	ns
Fall time (Note 2)	t <sub>F</sub>	$T_A = 25^{\circ}C, C_L = 330 \text{ pF}$ 90% to 10%		40	60	ns
Maximum switching frequency	f <sub>sw(max)</sub>	Any combination of line and load		130	140	kHz
V <sub>cc</sub> SECTION (Pin 8)				1		1
Maximum operating voltage (Note 2)	V <sub>CC(MAX)</sub>				16	V
Start-up threshold	V <sub>CC(ST)</sub>	V <sub>cc</sub> rising	10.8	12	13.2	V
Undervoltage lockout threshold	V <sub>CC(UVL)</sub>	V <sub>cc</sub> falling	5.5	6.0	6.6	V
Operating current	I <sub>ccq</sub>	C <sub>L</sub> = 330 pF, V <sub>SENSE</sub> = 1.5 V		3.5	5	mA

## Digital PWM Current-Mode Controller for AC/DC LED Driver



# 6.0 Electrical Characteristics (cont.)

 $V_{_{CC}}$  = 12 V, -40°C ≤  $T_{_{A}}$  ≤ 85°C, unless otherwise specified (Note 1)

Parameter	Symbol	Test Conditions	Min	Тур	Мах	Unit	
I <sub>SENSE</sub> SECTION (Pin 6)	I <sub>SENSE</sub> SECTION (Pin 6)						
Peak limit threshold	V <sub>PEAK</sub>		1.045	1.1	1.155	V	
Isense short protection reference	V <sub>RSNS</sub>		0.127	0.15	0.173	V	
CC regulation threshold limit (Note 2)	V <sub>REG-TH</sub>			1.0		V	
SD SECTION (Pin 4)							
Shutdown threshold	V <sub>SD-TH</sub>	T <sub>A</sub> = 25°C	0.95	1.0	1.05	V	
Shutdown threshold in Startup (Note 2)	V <sub>SD-TH(ST)</sub>			1.2		V	
Input leakage current	I <sub>BVSD</sub>	V <sub>SD</sub> = 1.0 V			1	μA	
Pull down resistance	R <sub>SD</sub>	T <sub>A</sub> = 25°C	7916	8333	8750	Ω	
Pull up current source	I <sub>SD</sub>	T <sub>A</sub> = 25°C	96	107	118	μA	

#### Notes:

Note 1. Adjust  $V_{cc}$  above the start-up threshold before setting at 12 V.

Note 2. These parameters are not 100% tested, guaranteed by design and characterization.

Note 3. Operating frequency varies based on the line and load conditions, see Theory of Operation for more details.

## Digital PWM Current-Mode Controller for AC/DC LED Driver



# **7.0 Typical Performance Characteristics**

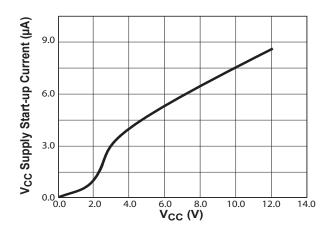


Figure 7.1 : V<sub>cc</sub> Supply Current vs. V<sub>cc</sub>

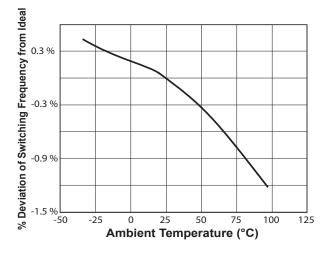


Figure 7.3 : Switching Frequency % Change vs. Temperature

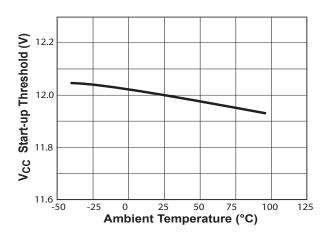


Figure 7.2 : Start-Up Threshold vs. Temperature

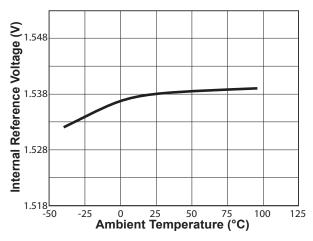


Figure 7.4 : Internal Reference vs. Temperature

## Digital PWM Current-Mode Controller for AC/DC LED Driver



# 8.0 Functional Block Diagram

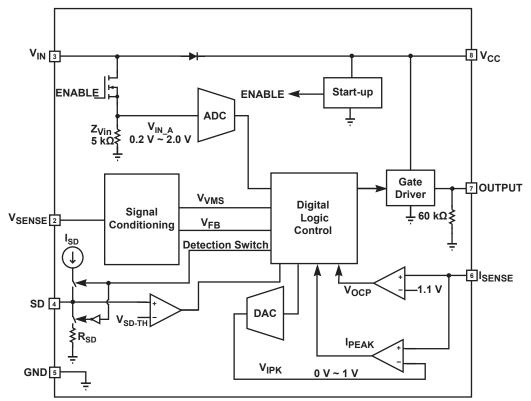


Figure 8.1 : iW3620 Functional Block Diagram

## **9.0 Theory of Operation**

The iW3620 is a digital controller which uses a proprietary primary-side control technology to eliminate the opto-isolated feedback and secondary regulation circuits required in traditional designs. This results in a low-cost solution for AC/DC adapters. The iW3620 uses Critical Discontinuous Conduction Mode (CDCM) or Pulse Width Modulation (PWM) mode at high output power levels and switches to Pulse Frequency Modulation (PFM) mode at light load to minimize power dissipation to meet EPA 2.0 specification. Furthermore, iWatt's digital control technology enables fast dynamic response, tight output regulation, and full featured circuit protection with primary-side control.

Referring to the block diagram in Figure 8.1, the digital logic control block generates the switching on-time and off-time information based on the line voltage and the output voltage feedback signal and provides commands to dynamically control the external MOSFET current. The system loop is compensated internally by a digital error amplifier. Adequate system phase and gain margin are guaranteed by design and no external analog components are required for loop compensation. The iW3620 uses an advanced digital

control algorithm to reduce system design time and improve reliability.

Furthermore, accurate secondary constant-current operation is achieved without the need for any secondary-side sense and control circuits.

The built-in protection features include overvoltage protection (OVP), output short circuit protection (SCP) and soft-start, AC line brown out, overcurrent protection, and Isense fault protection. Also the iW3620 automatically shuts down if it detects any of its sense pins to be either open or short.

iWatt's digital control scheme is specifically designed to address the challenges and trade-offs of power conversion design. This innovative technology is ideal for balancing new regulatory requirements for green mode operation with more practical design considerations such as lowest possible cost, smallest size and highest performance output control.

## Digital PWM Current-Mode Controller for AC/DC LED Driver

#### 9.1 Pin Detail

#### Pin 2 - V<sub>SENSE</sub>

Sense signal input from auxiliary winding. This provides the secondary voltage feedback used for output regulation.

#### Pin 3 – V<sub>IN</sub>

Sense signal input from the rectified line voltage.  $V_{IN}$  is used for line regulation. The input line voltage is scaled down using a resistor network. It is used for input undervoltage and overvoltage protection. This pin also provides the supply current to the IC during start-up.

#### Pin 4 – SD

External shutdown control. If the shutdown control is not used, this pin should be connected to GND via a resistor.

#### Pin 5 - GND

Ground.

#### Pin 6 – I<sub>sense</sub>

Primary current sense. Used for cycle by cycle peak current control.

#### Pin 7 – OUTPUT

Gate drive for the external MOSFET switch.

#### Pin 8 – V<sub>cc</sub>

Power supply for the controller during normal operation. The controller will start up when V<sub>cc</sub> reaches 12 V (typical) and will shut-down when the V<sub>cc</sub> voltage is below 6 V (typical). A decoupling capacitor should be connected between the V<sub>cc</sub> pin and GND.


#### 9.2 Start-up


Prior to start-up the V<sub>IN</sub> pin charges up the V<sub>cc</sub> capacitor through the diode between V<sub>IN</sub> and V<sub>cc</sub> (see Figure 8.1).

When  $V_{\rm CC}$  is fully charged to a voltage higher than the startup threshold  $V_{\rm CC(ST)}$ , the ENABLE signal becomes active and enables the control logic; the  $V_{\rm IN}$  switch turns on, and the analog-to-digital converter begins to sense the input voltage. Once the voltage on the  $V_{\rm IN}$  pin is above  $V_{\rm INSTLOW}$ , the iW3620 commences soft start function. An adaptive soft-start control algorithm is applied at startup state, during which the initial output pulses will be small and gradually get larger until the full pulse width is achieved. The peak current is limited cycle by cycle by  $I_{\rm PEAK}$  comparator.

If at any time the  $V_{_{CC}}$  voltage drops below  $V_{_{CC(UVL)}}$  threshold then all the digital logic is reset. At this time  $V_{_{\rm IN}}$  switch

turns off so that the  $V_{cc}$  capacitor can be charged up again towards the start-up threshold. Figure 9.1 shows the start-up sequence of the iW3620.

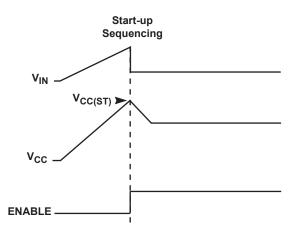



### 9.3 Understanding Primary Feedback

Figure 9.2 illustrates a simplified flyback converter. When the switch  $Q_1$  conducts during  $t_{ON}(t)$ , the current  $i_g(t)$  is directly drawn from rectified sinusoid  $v_g(t)$ . The energy  $E_g(t)$  is stored in the magnetizing inductance  $L_M$ . The rectifying diode  $D_1$  is reverse biased and the load current  $I_O$  is supplied by the secondary capacitor  $C_O$ . When Q1 turns off,  $D_1$  conducts and the stored energy  $E_g(t)$  is delivered to the output.

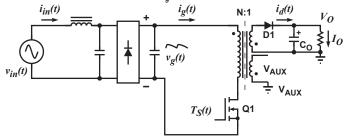


Figure 9.2 : Simplified Flyback Converter

In order to tightly regulate the output voltage, the information about the output voltage and load current needs to be accurately sensed. In the DCM flyback converter, this information can be read via the auxiliary winding. During the  $Q_1$  on-time, the load current is supplied from the output filter capacitor  $C_0$ . The voltage across  $L_M$  is  $v_g(t)$ , assuming the voltage dropped across  $Q_1$  is zero. The current in  $Q_1$  ramps up linearly at a rate of:

$$\frac{di_g(t)}{dt} = \frac{v_g(t)}{L_M} \tag{9.1}$$

At the end of on-time, the current has ramped up to:



## Digital PWM Current-Mode Controller for AC/DC LED Driver



$$i_{g_peak}(t_{ON}) = \frac{v_g(t) \times t_{ON}}{L_M}$$
(9.2)

This current represents a stored energy of:

$$E_g = \frac{L_M}{2} \times i_{g_peak} (t_{ON})^2 \tag{9.3}$$

When  $Q_1$  turns off,  $i_g(t)$  in  $L_M$  forces a reversal of polarities on all windings. Ignoring the communication-time caused by the leakage inductance  $L_K$  at the instant of turn-off, the primary current transfers to the secondary at a peak amplitude of:

$$i_d(t) = \frac{N_P}{N_S} \times i_{g_peak}(t_{ON})$$
(9.4)

Assuming the secondary winding is master and the auxiliary winding is slave.

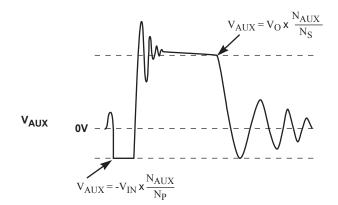


Figure 9.3 : Auxiliary Voltage Waveforms

The auxiliary voltage is given by:

$$V_{AUX} = \frac{N_{AUX}}{Ns} (V_O + \Delta V)$$
(9.5)

and reflects the output voltage as shown in Figure 9.3.

The voltage at the load differs from the secondary voltage by a diode drop and IR losses. The diode drop is a function of current, as are IR losses. Thus, if the secondary voltage is always read at a constant secondary current, the difference between the output voltage and the secondary voltage will be a fixed  $\Delta V$ . Furthermore, if the voltage can be read when the secondary current is small; for example, at the knee of the auxiliary waveform (see Figure 9.3), then  $\Delta V$  will also be small. With the iW3620,  $\Delta V$  can be ignored.

The real-time waveform analyzer in the iW3620 reads the auxiliary waveform information cycle by cycle. The part then generates a feedback voltage  $V_{FB}$ . The  $V_{FB}$  signal precisely

represents the output voltage and is used to regulate the output voltage.

#### 9.4 Dynamic Load Transient

There are two components that compose the voltage drop during a load transient event.

 $V_{\text{DROP(sense)}}$  is the drop in voltage before the  $V_{\text{SENSE}}$  signal is able to show a significant drop in output voltage. This is determined by  $V_{\text{min}}$  or the reference voltage at which a load transient is detected. The smaller the  $V_{\text{min}}$  means the smaller this drop in voltage is.

$$V_{DROP(sense)} = \left(V_{SENSE(nom)} - V_{SENSE(min)}\right) \times \frac{V_{OUT}}{V_{SENSE(nom)}}$$
(9.7)

Keep in mind that a smaller  $V_{_{min}}$  is less tolerant of noise and distortions in  $V_{_{\rm SENSE}}$  than a larger one.

The final drop in voltage is due to the time from when V<sub>SENSE</sub> drops V<sub>min</sub> to when the next V<sub>SENSE</sub> signal appears. In the worst case condition this is how much voltage drops during the longest switching period.

$$V_{DROP(IC)} = \frac{I_{OUT} \times T_{P(\text{No load})}}{C_{OUT}}$$
(9.8)

A larger output capacitance in this case greatly reduces the  $V_{\mbox{\tiny DROP(IC)}}$ 

#### 9.5 Valley Mode Switching

In order to reduce switching losses in the MOSFET and EMI, the iW3620 employs valley mode switching when  $I_{OUT}$  is above 50%. In valley mode switching, the MOSFET switch is turned on at the point where the resonant voltage across the drain and source of the MOSFET is at its lowest point (see Figure 9.4). By switching at the lowest  $V_{DS}$ , the switching loss will be minimized.

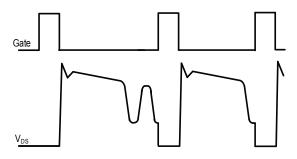


Figure 9.4 : Valley Mode Switching

Turning on at the lowest  $V_{\rm \tiny DS}$  generates lowest dV/dt, thus valley mode switching can also reduce EMI. To limit the switching frequency range, the iW3620 can skips valleys

## Digital PWM Current-Mode Controller for AC/DC LED Driver



(seen in the first cycle in Figure 9.4) when the switching frequency becomes too high.

iW3620 provides valley mode switching during constant current (CC) output operation. So, the EMI and switching losses are still minimized during CC mode. This feature is superior to other quasi-resonant technologies which only support valley mode switching during constant voltage operation. This is beneficial to LED driver applications where the IC mainly operates in CC mode.

### **9.6 Constant Voltage Operation**


After soft-start has been completed, the digital control block measures the output conditions. It determines output power levels and adjusts the control system according to a light load or a heavy load. If this is in the normal range, the device operates in the Constant Voltage (CV) mode, and changes the pulse width ( $T_{ON}$ ), and off time ( $T_{OFF}$ ) in order to meet the output voltage regulation requirements. During this mode the PWM switching frequency is between 30 kHz and 130 kHz, depending on the line and load conditions.

If less than 0.2 V is detected on V\_{\rm SENSE} it is assumed that the auxiliary winding of the transformer is either open or shorted and the iW3620 shuts down.

## **9.7 Constant Current Operation**

The constant current mode (CC mode) maintains a constant current output. During this mode of operation the iW3620 will regulate the output current at a constant level regardless of the output voltage, while avoiding continuous conduction mode. Figure 9.5 shows the operation modes of the iW3620.

To achieve this regulation the iW3620 senses the load current indirectly through the primary current. The primary current is detected by the  $I_{\text{SENSE}}$  pin through a resistor from the MOSFET source to ground.

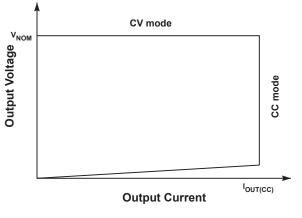



#### 9.8 PFM Mode at Light Load

The iW3620 normally operates in a fixed frequency PWM or critical discontinuous conduction mode when  $I_{OUT}$  is greater than approximately 10% of the specified maximum load current. As the output load  $I_{OUT}$  is reduced, the on-time  $t_{ON}$  is decreased. At the moment that the load current drops below 10% of nominal, the controller transitions to Pulse Frequency Modulation (PFM) mode. Thereafter, the on-time will be modulated by the line voltage and the off-time is modulated by the load current. The device automatically returns to PWM mode when the load current increases.

### **9.9 Variable Frequency Operation**

At each of the switching cycles, the falling edge of V<sub>SENSE</sub> will be checked. If the falling edge of V<sub>SENSE</sub> is not detected, the off-time will be extended until the falling edge of V<sub>SENSE</sub> is detected. The maximum allowed transformer reset time is 75 µs for iW3620.

## 9.10 Internal Loop Compensation

The iW3620 incorporates an internal Digital Error Amplifier with no requirement for external loop compensation. For a typical power supply design, the loop stability is guaranteed to provide at least 45 degrees of phase margin and –20dB of gain margin.

## 9.11 Voltage Protection Functions


The iW3620 includes a function that protects against an output overvoltage (OVP).

The output voltage is monitored by the V<sub>SENSE</sub> pin. If the voltage at this pin exceed its overvoltage threshold the iW3620 shuts down immediately. However, the IC remains biased which discharges the V<sub>CC</sub> supply. Once V<sub>CC</sub> drops below the UVLO threshold, the controller resets itself and then initiates a new soft-start cycle. The controller continues attempting start-up until the fault condition is removed.

## 9.12 PCL, OC and SRS Protection

Peak-current limit (PCL), over-current protection (OCP) and sense-resistor short protection (SRSP) are features built-into the iW3620. With the  $I_{\text{SENSE}}$  pin the iW3620 is able to monitor the primary peak current. This allows for cycle by cycle peak current control and limit. When the primary peak current multiplied by the  $I_{\text{SENSE}}$  sense resistor is greater than 1.1 V over current is detected and the IC will immediately turn off the gate drive until the next cycle. The output driver will send out switching pulse in the next cycle, and the switching pulse will continue if the OCP threshold is not reached; or, the switching pulse will turn off again if the OCP threshold is still reached.

## Digital PWM Current-Mode Controller for AC/DC LED Driver

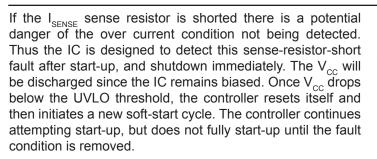

### 9.13 Shutdown

The shutdown (SD) pin in the iW3620 provides protection against overtemperature (OTP) and additional overvoltage (OVP) for the power supply.

The iW3620 switches between monitoring overtemperature fault and overvoltage fault. In order to detect the resistance in the NTC for an overtemperature fault, the iW3620 connects a current source to the SD pin and checks the voltage on the pin. To ensure that the current source is settled before the voltage is checked both OTP and OVP are detected on the last cycle, as depicted in Figure 9.6.

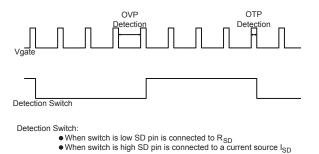


Figure 9.6 : SD Pin Detection Cycles

During an overvoltage monitor cycle the SD pin is connected to a resistance internal to the chip,  $R_{SD}$ , to ground and the voltage on the SD pin is observed. Figure 9.7 shows how the SD pin is configured inside the chip.

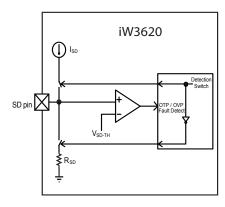


Figure 9.7 : Internal Function of SD Pin

#### 9.14 Thermal Design

The iW3620 is typically installed inside a small enclosure, where space and air volumes are constrained. Under these circumstances  $\theta_{JA}$  (thermal resistance, junction to ambient) measurements do not provide useful information for this type of application. Instead we have provided  $\psi_{JB}$  which estimates the increase in die junction temperature relative to the PCB surface temperature. Figure 9.8 shows the PCB surface temperature is measured at the IC's GND pin pad.

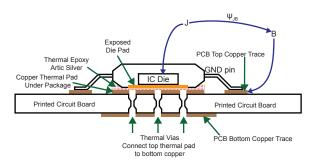


Figure 9.8 : Ways to Improve Thermal Resistance

Using  $\psi_{\rm JB}$ , the junction temperature (T<sub>J</sub>) of the IC can be found using the equation below.

$$T_J = T_B + P_H \cdot \Psi_{\rm JB} \tag{9.9}$$

where,  $T_{B}$  is the PCB surface temperature and  $P_{H}$  is the power applied to the chip or the product of  $V_{cc}$  and  $I_{cco}$ .

The iW3620 uses an exposed pad package to reduce the thermal resistance of the package. Although just by using an exposed package can provide some thermal resistance improvement, more significant improvements can be obtained with simple PCB layout and design. Figure 9.8 demonstrates some recommended techniques to improve thermal resistance, which are also highlighted below.

#### **Ways to Improve Thermal Resistance**

- Increase PCB area and associated amount of copper interconnect.
- Use thermal adhesive to attach the package to a thermal pad on PCB.
- Connect PCB thermal pad to additional copper on PCB.

Environment	Ψ <sub>JB</sub>
No Attachment to PCB	70 °C/W
Attach Package to PCB with Thermal Adhesive	63 °C/W
Use Thermal Adhesive and Thermal Vias	49 °C/W

Table 9.1 : Improvements in  $\psi_{_{JB}}$  Based on Limited Experimentation

## Digital PWM Current-Mode Controller for AC/DC LED Driver





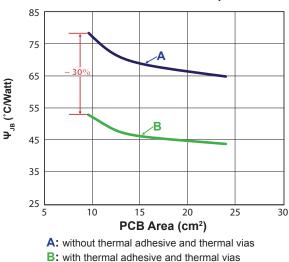


Figure 9.9 : Effect of Thermal Resistance Improvements

Figure 9.9 shows improvement of approximately 30% in thermal resistance across different PCB sizes when the exposed pad is attached to PCB using a thermal adhesive and thermal vias connect the pad to a larger plate on the opposing side of the PCB.

## **10.0 Design Example**

#### **10.1 Design Procedure**

This design example gives the procedure for a flyback converter using iW3620. Refer to Figure 12.1 for the application circuit. The design objectives for this adapter are given in Table 10.1. It meets UL, IEC, and CEC requirements.

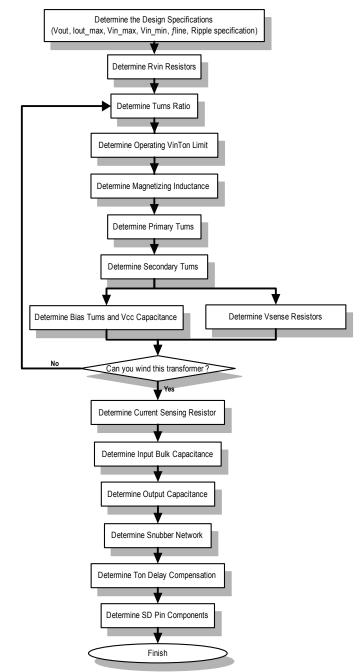


Figure 10.1 : Design Procedure

## Digital PWM Current-Mode Controller for AC/DC LED Driver

#### **10.2 Determine Design Specifications**

Parameter	Symbol	Range
Input Voltage	V <sub>IN</sub>	90 - 264 V <sub>RMS</sub>
Frequency	f <sub>in</sub>	47 - 64 Hz
Maximum Output Voltage	V <sub>OUT(max)</sub>	24.0 V
Nominal Output Voltage	V <sub>OUT(nom)</sub>	21.0 V
Maximum Output Current	I <sub>OUT(max)</sub>	0.87 A
Nominal Output Current	I <sub>OUT(nom)</sub>	0.5 A
Output Ripple	V <sub>RIPPLE</sub>	< 100 mV
Power Out	P <sub>out</sub>	20 W
EPA 2.0 Efficiency	η	84%

Table 10.1 : iW3620 Design Specification Table

Use equation 10.1 and 10.2 to determine  $V_{_{OUT}}$  in the following calculations, where  $V_{_{FD}}$  is the forward voltage of the output diode.

 $V_{OUT(PCB)} = 110\% \times V_{OUT(nom)}$ (10.1)

 $V_{OUT} = V_{OUT(PCB)} + V_{FD} \tag{10.2}$ 

For this example the nominal  $V_{_{OUT(nom)}}$  is 21 V, assuming  $V_{_{FD}}$  is 0.5,  $V_{_{OUT}}$  is:

 $V_{OUT(PCB)} = 110\% \times 21V = 23.1$ 

 $V_{OUT} = 23.1V + 0.5V = 23.6V$ 

### **10.3 Input Selection**

 $V_{_{\rm IN}}$  resistors are chosen primarily to scale down the input voltage for the IC. The default scale factor for the input voltage in the IC is 0.0043 and the internal impedance of this pin is  $Z_{_{\rm IN}}$  (5 kΩ). Therefore, the  $V_{_{\rm IN}}$  resistors should equate to:

$$R_{Vin} = \frac{Z_{IN}}{0.0043} - Z_{IN} \tag{10.3}$$

From equation 10.3, ideally  $R_{Vin}$  should be 1.16 M $\Omega$ . A lower value of  $R_{Vin}$  can decrease the startup time of the power supply. The value of  $R_{Vin}$  affects the ( $V_{IN}T_{ON}$ ) limits of the IC.

$$\left(V_{IN} \cdot T_{ON}\right)_{\text{limit}} = 0.0043 \times \frac{720V \cdot \mu s}{Z_{IN} / (R_{Vin} + Z_{IN})}$$

$$\left(V_{IN} \cdot T_{ON}\right)_{\text{limit}} = 0.0043 \times \frac{135V \cdot \mu s}{Z_{IN} / (R_{Vin} + Z_{IN})}$$
(10.5)

For this example  $R_{v_{in}}$  is chosen to be 1.12 M $\Omega$  therefore,

$$(V_{IN} \cdot T_{ON})_{\text{limit}} = 0.0043 \times \frac{720V \cdot \mu s}{5k\Omega/(1.12M\Omega + 5k\Omega)} = 697V \cdot \mu s$$

$$(V_{IN} \cdot T_{ON})_{\text{limit}} = 0.0043 \times \frac{135V \cdot \mu s}{5k\Omega/(1.12 + 5k\Omega)} = 131V \cdot \mu s$$

Keep in mind, by changing  $R_{\text{vin}}$  to be something other than 1.16  $M\Omega$  the minimum and maximum input voltage for start-up also changes.

Since the iW3620 uses the exact scaled value of V<sub>IN</sub> for its calculations, there should be a filter capacitor on the input pin to filter out any noise that may appear on the V<sub>IN</sub> signal. This is especially important for line in surge conditions.

### **10.4 Turns Ratio**

The maximum allowable turns ratio between the primary and secondary winding is determined by the minimum detectable reset time of the transformer during PFM mode.

$$N_{TR(\max)} = \frac{\left(V_{IN} \cdot T_{ON}\right)_{PFM}}{T_{RESET(\min)} \times V_{OUT}}$$
(10.6)

Setting T<sub>RESET(min)</sub> at 1.5 µs,

$$N_{TR(\text{max})} = \frac{131V \cdot \mu s}{1.5\mu s \times 23.6V} = 3.70$$

For this example a turns ratio of 2.5 is chosen.

Keep in mind in valley mode switching the higher the turns ratio the lower the V<sub>DS</sub> turn-on voltage, which means less switch turn-on power loss. Also consider the voltage stress on the MOSFET (V<sub>DS</sub>) is higher with an increase in turns ratio. The voltage stress on the output diode is lower with an increase in turns ratio respectively.

## **10.5 Operating Maximum (V<sub>IN</sub>T<sub>ON</sub>)**

Maximum operating  $V_{IN}T_{ON}$  or  $(V_{IN}T_{ON})_{MAX}$  for valley mode switching is traditionally designed at full load and lowest input voltage. For the iW3620, two constraints (equation 10.7 and 10.8) need to be satisfied so that indeed  $(V_{IN}T_{ON})_{MAX}$  occurs at full load and lowest input voltage.

(10.4)



### **Digital PWM Current-Mode Controller for AC/DC LED Driver**



$$T_{P(QR\min)} > \frac{1}{100kHz}$$
 (10.7)

$$T'_{P(QR\min)} > \frac{1}{110kHz} + T_{RES}$$
 (10.8)

 $T_{RES}$  is the V<sub>DS</sub> resonant period as shown in Figure 10.2.  $T_{RES}$  can be estimated to be approximately 2 µs as a starting point and then adjusted after the power supply is tested.

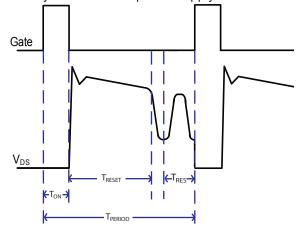


Figure 10.2 : V<sub>DS</sub> Timing

When both criterion are met then  $(V_{IN}T_{ON})_{MAX}$  can be determined by equation 10.9.

$$(V_{IN} \cdot T_{ON})_{\text{max}} = \left[ f_{SW(\text{max op})} \times \left( \frac{1}{V_{INDC(\text{min})}} + \frac{1}{N_{TR} \times V_{OUT}} \right) \right]^{-1}$$
where,  $f_{SW(\text{max op})} = \frac{1}{T_{P(QR\text{min})}}$ 
(10.9)

Where  $V_{\ensuremath{\mathsf{INDC}}(\ensuremath{\mathsf{min}})}$  is the minimum input voltage across the bulk capacitor.

Assuming  $T_{RES}$  is 2 µs then:

$$T_{P(QR\min)} > 10\mu s$$
  
 $T'_{P(QR\min)} > \frac{1}{110kHz} + 2\mu s = 11.1\mu s$ 

Using 80 V for V<sub>INDC(min)</sub>,

$$f_{SW(\text{max op})} = 85kHz$$
, and  $T_P = 11.76\mu s$   
 $\left(V_{IN} \cdot T_{ON}\right)_{\text{max}} = \left[85kHz \times \left(\frac{1}{80V} + \frac{1}{2.5 \times 23.6}\right)\right]^{-1} = 399V \cdot \mu s$ 

Also, to provide enough margin for component values, usually:

$$\left(V_{IN} \cdot T_{ON}\right)_{\text{max}} < \left(V_{IN} \cdot T_{ON}\right)_{\text{limit}} \times 0.85 \tag{10.10}$$

$$(V_{IN} \cdot T_{ON})_{\text{max}} < 697V \cdot \mu \text{s} \times 0.85 = 592V \cdot \mu \text{s}$$

### **10.6 Magnetizing Inductance**

A feature of the iW3620 is the lack of dependence on the magnetizing inductance for the CC curve.

Although the constant current limit does not depend on the magnetizing inductance, there are still restrictions on the magnetizing inductance. The maximum  $L_M$  is limited by the amount of power that needs to come out of the transformer in order for the power supply to regulate. This is given by:

$$L_{M(\max)} = \frac{\left(V_{IN} \cdot T_{ON}\right)_{\max}^2 \times f_{sw(\max op)}}{2 \times P_{XFMR(\max)}}$$

$$P_{XFMR(\max)} = \frac{V_{OUT} \times I_{OUT}}{\eta_X}$$
(10.11)

Where  $\eta_x$  is the efficiency of the transformer, for this example we assume it's 87 %.

$$P_{XFMR(\max)} = \frac{23.6V \times 0.5A}{0.87} = 13.6W$$
$$L_{M(\max)} = \frac{(399V \cdot \mu s)^2 \times 85kHz}{2 \times 13.6W} = 0.497mH$$

The minimum  $L_{\rm M}$  is limited by the maximum allowable peak primary current.  $V_{\rm REG-TH}$  corresponds to the maximum  $I_{\rm SENSE}$  voltage (see Section 10.11 to calculate  $R_{\rm Isense}$ ). Therefore  $L_{\rm M}$  is limited by:

$$L_{M(\min)} = \frac{2 \times P_{XFMR(\max)}}{f_{SW(\max \text{ op})} \times \left(\frac{V_{REG-TH}}{R_{Isense}}\right)^2}$$

$$L_{M(\min)} = \frac{2 \times 13.6W}{85kHz \times \left(\frac{1.0V}{1.1\Omega}\right)^2} = 0.387mH$$
(10.12)

For this example, we choose  $L_{M}$  to be 0.438 mH.

If these limits do not give enough tolerance for  $L_{_M}$ , increasing  $(V_{_{IN}}T_{_{ON}})_{_{max}}$  can raise the maximum limit on  $L_{_M}$ . Take care not to go above  $(V_{_{IN}}T_{_{ON}})_{_{limit}}$ . Also, keep in mind that if equation 10.7 and 10.8 are not met then  $(V_{_{IN}}T_{_{ON}})_{_{max}}$  does not occur at full load and lowest input voltage, thus some of the equations here would be invalid.

### **10.7 Primary Winding**

In order to keep the transformer from saturation, the maximum flux density must not be exceeded. Therefore the minimum primary winding must meet:

### Digital PWM Current-Mode Controller for AC/DC LED Driver

$$N_{PRI} \ge \frac{\left(V_{IN} \cdot T_{ON}\right)_{\max}}{B_{\max} \times A_e}$$
(10.13)

Where  $\rm B_{_{MAX}}$  is maximum allowed flux density and  $\rm A_{_e}$  is the core area. From the transformer core datasheet we find that for this example  $\rm B_{_{MAX}}$  is 320 mT. For an RM6 core,  $\rm A_{_e}$  is 35 mm².

$$N_{PRI} \ge \frac{399V \cdot \mu s}{320mT \times 35mm^2} = 36$$

For this example, we choose 75 primary turns.

#### **10.8 Secondary Winding**

From the primary winding turns, we obtain the secondary winding.

$$N_{SEC} = \frac{N_{PRI}}{N_{TR}} \tag{10.14}$$

Thus, in our example:

$$N_{SEC} = \frac{75}{2.5} = 30$$

### 10.9 Bias Winding and V<sub>cc</sub> Capacitance

 $V_{cc}$  is the supply to the iW3620 and should be below 16 V. The bias winding needs to ensure than  $V_{cc}$  does not exceed 16 V during normal operation.

$$N_{BLAS} = \frac{N_{SEC} \left( V_{CC} + V_{FD} \right)}{V_{OUT}} \tag{10.15}$$

Set  $V_{cc}$  at around 11 V

$$N_{BIAS} = \frac{30(11V + 0.5)}{23.6} = 15$$

Choose a value for  $\rm N_{\rm BIAS}$  to be close to this number, for this example we choose 15 turns.

The V<sub>cc</sub> capacitor (C<sub>Vcc</sub>) stores the V<sub>cc</sub> charge during IC operation and the controller checks this voltage and makes sure it is within range before starting and operating. The startup time is a function of how quickly this capacitor can charge up.

$$t_{START-UP} = \frac{C_{V_{CC}} \times V_{CC(ST)}}{\frac{V_{INAC} \times \sqrt{2}}{R_{Vin}} - I_{INST}}$$
(10.16)

### 10.10 V<sub>SENSE</sub> Resistors and Winding

The output voltage regulation is mainly determined by the feedback signal  $\rm V_{\rm SENSE}$ 

$$V_{\text{SENSE}} = V_{OUT\_PCB} \times K_{\text{SENSE}} \tag{10.17}$$

Where:

$$K_{SENSE} = \frac{R_{BVsns}}{\left(R_{BVsns} + R_{TVsns}\right)} \times \frac{N_{Vsense}}{N_{SEC}}$$
(10.18)

Internally,  $V_{_{SENSE}}$  is compared to a reference voltage  $V_{_{SENSE(nom)}}$ . Where,  $V_{_{SENSE(nom)}}$  is 1.538 V.

$$K_{SENSE} = \frac{V_{SENSE(nom)}}{V_{OUT\_PCB}}$$
(10.19)

$$K_{SENSE} = \frac{1.538V}{23.6V} = 0.065$$

From here we can find the ratio necessary for  $R_{_{BVsns}}$  and  $R_{_{TVsns}}$ . For this example we set  $R_{_{TVsns}}$  to be 20 k $\Omega$ . Assuming we use the same winding for both  $V_{_{SENSE}}$  and  $V_{_{CC}}$ :

$$0.065 = \frac{R_{BVsns}}{\left(R_{BVsns} + 20k\Omega\right)} \times \frac{15}{30}$$
  
$$\therefore R_{BVsns} = 3.0k\Omega$$

At this point the transformer design is complete. This would be a good time to confirm that this transformer is feasible to build.

#### **10.11 Current Sense Resistor**

The  $I_{\text{SENSE}}$  resistor determines the maximum current output of the power supply. The output current of the power supply is determined by:

$$I_{OUT} = \frac{1}{2} \times N_{TR} \times I_{PRI(pk)} \times \frac{T_{RESET}}{T_{PERIOD}} \times \eta_X$$
(10.20)

When the maximum current output is achieved the voltage seen on the  $I_{\text{SENSE}}$  pin ( $V_{\text{Isense}}$ ) should reach its maximum. Thus, at constant current limit:

$$I_{PRI(pk)} = \frac{V_{Isense(CC)}}{R_{Isense}}$$
(10.21)

Substituting this into equation 10.20 we get:

$$V_{Isense(CC)} = \frac{T_{PERIOD}}{T_{RESET}} \times K_C$$
(10.22)

For iW3620  $\rm K_{\rm C}$  is 0.5 V, therefore  $\rm R_{\rm _{Isense}}$  depends on the maximum output current by;

$$R_{Isense} = \frac{N_{TR} \times K_C}{2 \times I_{OUT(nom)}} \times \eta_X$$
(10.23)



## Digital PWM Current-Mode Controller for AC/DC LED Driver

From Table 10.1  $\rm I_{\rm OUT(nom)}$  is given to be 0.5 A, therefore  $\rm R_{\rm Isense}$  is:

$$R_{Isense} = \frac{2.5 \times 0.5V}{2 \times 0.5A} \times 0.87 = 1.08\Omega$$

We recommend using ±1% tolerance resistors for R<sub>Isense</sub>.

#### **10.12 Input Bulk Capacitor**

The input bulk capacitor,  $\rm C_{BULK}$  is chosen to maintain enough input power to sustain constant output power even as the input voltage is dropping. In order for this to be true  $\rm C_{BULK}$  must be:

$$C_{BULK} = \frac{2 \times P_{IN} \times \left[0.25 + \frac{1}{2\pi} \times \arcsin\left(\frac{V_{INDC(\min)}}{\sqrt{2} \times V_{INAC(\min)}}\right)\right]}{\left(2 \times V_{INAC(\min)}^2 - V_{INDC(\min)}^2\right) \times f_{line}}$$

$$P_{IN} = \frac{V_{OUT(Cable)} \times I_{OUT}}{\eta_{power supply}}$$
(10.24)

 $V_{_{INAC(min)}}$  is the minimum input voltage (rms) to be inputted into the power supply and  $f_{_{Iine}}$  is the lowest line frequency for the power supply (in this case 47 Hz).  $V_{_{INDC(min)}}$  is determined in Section 10.5 to be 80 V.

$$P_{IN} = \frac{23.6V \times 0.5A}{0.85} = 13.88W$$
$$C_{BULK} = \frac{2 \times 13.88W \times \left[0.25 + \frac{1}{2\pi} \times \arcsin\left(\frac{80V}{\sqrt{2} \times 85V_{AC}}\right)\right]}{\left(2 \times 85^2 - 80^2\right) \times 47} = 22\mu F$$

For this example  $C_{BULK}$  is chosen to be 47  $\mu$ F.

#### **10.13 Output Capacitance**

The output capacitance affects both the steady state ripple and the dynamic response of the power supply.

Assuming an ideal capacitor where ESR (equivalent series resistance) and ESL (equivalent series inductance) are negligible then:

$$C_{OUT(\text{Steady State})} = \frac{Q_{OUT}}{V_{OUT(ripple)}}$$
(10.25)

The output capacitor supplies the load current when the secondary current is below the output current.

$$Q_{OUT} = \frac{L_M \times \left(I_{SEC(pk)} - I_{OUT(nom)}\right)^2}{2 \times N_{TR}^2 \times \eta_X \times V_{OUT}}$$
(10.26)

The I<sub>SEC(pk)</sub> is:

$$I_{SEC(pk)} = \frac{\left(V_{IN} \cdot T_{ON}\right)_{MAX}}{L_M} \times N_{TR} \times \eta_X$$

So to keep 
$$V_{OUT(ripple)}$$
 to be 100 mV,

$$I_{SEC(pk)} = \frac{399V \cdot \mu s}{0.438mH} \times 2.5 \times 0.87 = 1.98A$$

$$Q_{OUT} = \frac{0.438mH \times (1.98A - 0.5A)^2}{2 \times 2.5^2 \times 0.87 \times 23.6V} = 3.74 \mu C$$

$$C_{OUT(\text{Steady State})} = \frac{3.74 \mu C}{100 mV} = 37 \mu F$$

The actual ripple is higher than the above calculations suggest, because the calculations do not include ESR.

Assume that the load transient goes from no load to I<sub>OUT(HIGH)</sub>. Then from Section 9.4, equation 9.8 we find that the relationship between output capacitance (C<sub>OUT(Dynamic)</sub>) and V<sub>DROP(IC)</sub> is :

$$C_{OUT(\text{Dynamic})} = \frac{I_{OUT(HIGH)} \times T_{P(\text{No load})}}{V_{DROP(IC)}}$$
(10.28)

Then solving for V<sub>DROP(IC)</sub>, where V<sub>Dynamic(DROP)</sub> is the maximum allowable drop in voltage for the design during dynamic response, and V<sub>DROP(sense)</sub> is the drop in voltage before V<sub>SENSE</sub> signal is low enough to register a dynamic transient.

$$C_{OUT(\text{Dynamic})} = \frac{I_{OUT(HIGH)} \times T_{P(\text{No load})}}{V_{Dynamic(Drop)} - V_{DROP(sense)}}$$
(10.29)

Where  $T_{P(No \ load)}$  is the maximum period under no load condition, given by equation 10.30:

$$T_{P(\text{No load})} = \frac{R_{\text{Preload}} \times (V_{IN} \cdot T_{ON})_{PFM}^2}{2 \times L_M \times V_{OUT}^2} \times \eta_{\text{No load}}$$
(10.30)

Assume that we want no more than 2.0 V drop on  $V_{_{OUT(PCB)}}$  during load transient from no load to 100% load and the efficiency of the power supply at no load  $(\eta_{_{No\ load}})$  is 50% , then  $C_{_{OUT(Dvnamic)}}$  is:

$$T_{P(\text{No load})} = \frac{20k\Omega \times (131V \cdot \mu s)^2}{2 \times 0.438mH \times 23.6V^2} \times 0.5 = 352\mu s$$

$$V_{DROP(sense)} = (1.538V - 1.48V) \times \frac{23.6V}{1.538V} = 0.890V$$

Plug everything into equation 10.29:

$$C_{OUT(Dynamic)} = \frac{0.5A \times 352 \mu s}{(2V - 0.890V)} = 159 \mu F$$

Pick the larger capacitance value between  $C_{_{OUT(Dynamic)}}$  and  $C_{_{OUT(Steady \, State)}}$ . In this case  $C_{_{OUT}}$  is chosen to be 470  $\mu F.$ 

(10.27)



## Digital PWM Current-Mode Controller for AC/DC LED Driver

#### **10.14 Snubber Network**

The snubber network is implemented to reduce the voltage stress on the MOSFET immediately following the turn off of the gate drive. The goal is to dissipate the energy from the leakage inductance of the transformer. For simplicity and a more conservative design first assume the energy of the leakage inductance is only dissipated through the snubber. Thus:

$$\frac{1}{2} \times L_{lk} \times I_{PRI(pk)}^2 = \frac{1}{2} \times C_{SNUB} \times \left[ V_{Snub(pk)}^2 - V_{Snub(val)}^2 \right]$$
(10.31)

 $L_{\rm lk}$  can be measured from the transformer.  $V_{\rm Snub(pk)}$  and  $V_{\rm Snub(val)}$  refer to the voltage measured across the snubber capacitor. Choose a  $C_{\rm SNUB}$ , keeping in mind that the larger the value of  $C_{\rm SNUB}$  the lower the voltage stress is on the MOSFET. However, capacitors are more expensive the larger their capacitance. Choose  $C_{\rm SNUB}$  based on these two criteria and select  $V_{\rm Snub(pk)}$  and  $V_{\rm Snub(val)}$ . Now a resistor needs to be selected to dissipate  $V_{\rm Snub(pk)}$  to  $V_{\rm Snub(val)}$  during the ontime of the gate driver. The dissipation of this resistor is given by:

$$\frac{V_{Snub(val)}}{V_{Snub(pk)}} = e^{-T_{P(\min op)}/R_{SNUB}C_{SNUB}}$$
(10.32)

Using equation 10.32 solve for  $\rm R_{_{SNUB}}.$  This gives a conservative estimate of what  $\rm C_{_{SNUB}}$  and  $\rm R_{_{SNUB}}$  should be.

Included in the snubber network is also a resistor in series with a diode. The diode directs current to the snubber capacitor when the MOSFET is turned off; however there is some reverse current that goes through the diode immediately after the MOSFET is turned back on. This reverse current occurs because there is a short period of time when the diode still conducts after switching from forward biased to reverse biased. This conduction distorts the falling edge of the V<sub>SENSE</sub> signal and affects the operation of the IC. So, the resistor in series with the diode is there to diminish the reverse current that goes through the diode immediately after the MOSFET is turned on.

## 10.15 T<sub>on</sub> Delay Filter

iW3620 also contains a feature that allows for adjustment to match high line and low line constant current curves. The mismatch in high line and low line is due to the delay from the IC propagation delay, driver turn-on delay, and the MOSFET turn-on delay. The driver turn-on delay maybe further increased by a gate resistor to the MOSFET. To adjust for these delays the iW3620 factors these delays into its calculations and slightly over compensates for them to provide flexibility.  $R_{Dly}$  and  $C_{Dly}$  provide extra delay in the circuit to tweak the compensation. To determine values  $R_{Dly}$ and  $C_{Dly}$  follow these steps:

- 1. Measure the difference between high line and low line constant current limit without filter components.
- 2. Find the curve that best matches this difference from Figure 11.1.
- 3. Find the  $L_{_M}$  that matches the power supply, and find the  $\tau_{_{RC}}.$
- 4. Find  $R_{Dlv}$  and  $C_{Dlv}$  from equation 10.33

$$\tau_{RC} = R_{Dly} \times C_{Dly} \tag{10.33}$$

### **10.16 SD Protection**

The SD pin can be configured to provide three different types of protection: OTP protection, OVP protection and both OVP and OTP Protection. Figure 10.3 shows the three configurations plus the configuration for no OTP and OVP protection.

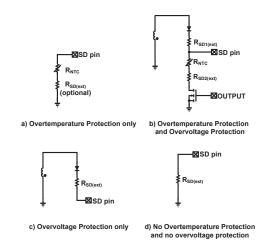


Figure 10.3 : SD Pin Application Configurations

#### OTP Only

To detect an overtemperature protection the iW3620 sends a 107  $\mu$ A current (I<sub>SD</sub>) to the SD pin every four cycles (see Section 9.13). On the last cycle the iW3620 observes the voltage on the SD pin and detects an OTP fault if the voltage is lower than V<sub>SD-TH</sub>, 1.0 V during normal operation and 1.2 V during startup. So R<sub>SD(ext)</sub> in series with NTC must meet

$$\left(R_{NTC} + R_{SD(ext)}\right) \times I_{SD} > V_{SD-TH}$$
(10.34)

in order not to trigger OTP fault during normal operation.

#### **OVP Only**

For the other four cycles, the iW3620 connects the SD pin to  $R_{SD}$  to ground (see Section 9.13). At the last cycle the iW3620 observes the voltage on the SD pin and detects an

## Digital PWM Current-Mode Controller for AC/DC LED Driver

OVP fault if the voltage is higher than  $V_{\text{SD-TH}}$ , 1 V. In order to not trigger OVP fault, assuming 0 V drop across the series diode,  $R_{\text{SD(ext)}}$  must meet:

$$\frac{V_{OUT\_PCB}}{N_{SEC}} \times N_{AUX} \times \frac{R_{SD}}{R_{SD} + R_{SD(ext)}} < V_{SD-TH}$$
(10.35)

where,  $R_{SD}$  = 8.333 k $\Omega$ 

#### Both OTP and OVP

To find  $\rm R_{\rm SD1(ext)}$  so that OVP can be detected, use equation 10.35. To find  $\rm R_{\rm SD2(ext)}$  in series with the NTC use equation 10.34.

#### No OTP and OVP

If OTP and OVP from the SD pin are not needed, simply place a resistor,  $R_{_{SD(ext)}}$  to ground from the SD pin. Make sure  $R_{_{SD(ext)}}$  meets equation 10.36 so OTP protection does not trip.

$$R_{SD(ext)} \times I_{SD} > V_{SD-TH}$$
(10.36)

Note that this means OVP is not detected through the SD pin; however, OVP from  $V_{\text{SENSE}}$  pin is still active and the iW3620 still shuts down if overvoltage condition is detected.

Since for this example OTP and OVP are not necessary we place a resistor from SD pin to ground and calculate its value from equation 10.36.

$$R_{NTC} > \frac{1.2V}{100 \mu A} = 12k\Omega$$

### 10.17 PCB Layout

In the iW3620, there are two signals that are important to control the output performance; these are the I<sub>SENSE</sub> signal and the V<sub>SENSE</sub> signal. The I<sub>SENSE</sub> resistor should be close to the source of the MOSFET to avoid any trace resistance from contaminating the I<sub>SENSE</sub> signal. Also, the I<sub>SENSE</sub> signal should be placed close to the transformer to improve the quality of the sensing signal. Also for better output performance all bypass capacitors should be placed close to their respective pins.

To reduce EMI, switching loops need to be minimized. These loops include (see Figure 10.4):

- 1. The input bulk capacitor, primary winding, MOSFET and R<sub>Isense</sub> loop.
- 2. The output diode, output capacitor and secondary winding loop.

3.  $V_{cc}$  winding and rectifier diode loop.

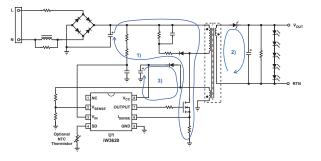


Figure 10.4 : Switching Loops

To improve ESD performance provide a low impedance path from the ground pin of the transformer to the ac power source and make sure this path does not go through the IC ground pin. A discharge spark gap helps to transfer ESD and EOS energy from the secondary side of the power supply directly to the external ac power source.

In a switch-mode power supply there are several ground signals, namely: the power ground, the switching ground and the control logic ground. These ground signals should be connected by a star connection. Ground traces should be kept as short as possible. A thick trace on the switching ground helps to lessen switching losses.



**Digital PWM Current-Mode Controller for AC/DC LED Driver** 



# **11.0 Performance Characteristics**

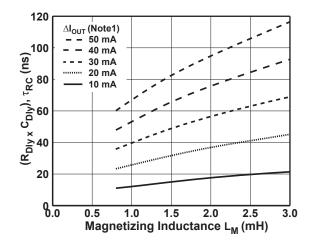


Figure 10.5 : T<sub>ON</sub> Compensation Chart

# **12.0 Application Circuit**

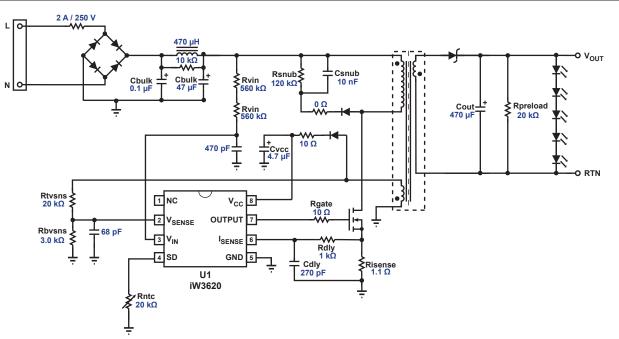


Figure 12.1 : Typical Application Circuit


Note 1:  $\Delta I_{out}$  refers to the difference in constant current limit between 264 V<sub>ac</sub> and 90 V<sub>ac</sub> when no R<sub>DLY</sub> and C<sub>DLY</sub> are applied.

## Digital PWM Current-Mode Controller for AC/DC LED Driver



## **13.0 Physical Dimensions**

8-Lead Small Outline (SOIC) Package

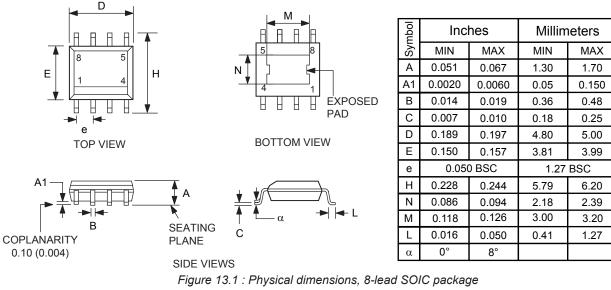

Compliant to JEDEC Standard MS12F

Controlling dimensions are in inches; millimeter dimensions are for reference only

This product is RoHS compliant and Halide free.

Soldering Temperature Resistance:

[a] Package is IPC/JEDEC Std 020D Moisture Sensitivity Level 3

Dimension D does not include mold flash, protrusions or gate burrs. Mold flash, protrusions or gate burrs shall not exceed 0.15 mm per end. Dimension E does not include interlead flash or protrusion. Interlead flash or protrusion shall not exceed 0.25 mm per side.

The package top may be smaller than the package bottom. Dimensions D and E are determined at the outermost extremes of the plastic bocy exclusive of mold flash, tie bar burrs, gate burrs and interlead flash, but including any mismatch between the top and bottom of the plastic body.

## **14.0 Ordering Information**

Part Number	Package	Description
iW3620-00	SOIC-8	Tape & Reel <sup>1</sup>

Note 1: Tape & Reel packing quantity is 2,500/reel.

## Digital PWM Current-Mode Controller for AC/DC LED Driver



## About iWatt

iWatt Inc. is a fabless semiconductor company that develops intelligent power management ICs for computer, communication, and consumer markets. The company's patented *pulseTrain*<sup>™</sup> technology, the industry's first truly digital approach to power system regulation, is revolutionizing power supply design.

#### **Trademark Information**

© 2012 iWatt, Inc. All rights reserved. iWatt, *EZ-EMI* and *pulseTrain* are trademarks of iWatt, Inc. All other trademarks and registered trademarks are the property of their respective companies.

#### **Contact Information**

Web: http://www.iwatt.com

E-mail: info@iwatt.com

Phone: 408-374-4200 Fax: 408-341-0455

iWatt Inc. 675 Campbell Technology Parkway, Suite 150 Campbell, CA 95008

#### Disclaimer

iWatt reserves the right to make changes to its products and to discontinue products without notice. The applications information, schematic diagrams, and other reference information included herein is provided as a design aid only and are therefore provided as-is. iWatt makes no warranties with respect to this information and disclaims any implied warranties of merchantability or non-infringement of third-party intellectual property rights.

iWatt cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in an iWatt product. No circuit patent licenses are implied.

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

IWATT SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS, OR OTHER CRITICAL APPLICATIONS.

Inclusion of iWatt products in critical applications is understood to be fully at the risk of the customer. Questions concerning potential risk applications should be directed to iWatt, Inc.

iWatt semiconductors are typically used in power supplies in which high voltages are present during operation. High-voltage safety precautions should be observed in design and operation to minimize the chance of injury.