



High Speed, Matched-Impedance, Parallel Board-to-board Connector

IT1 Series

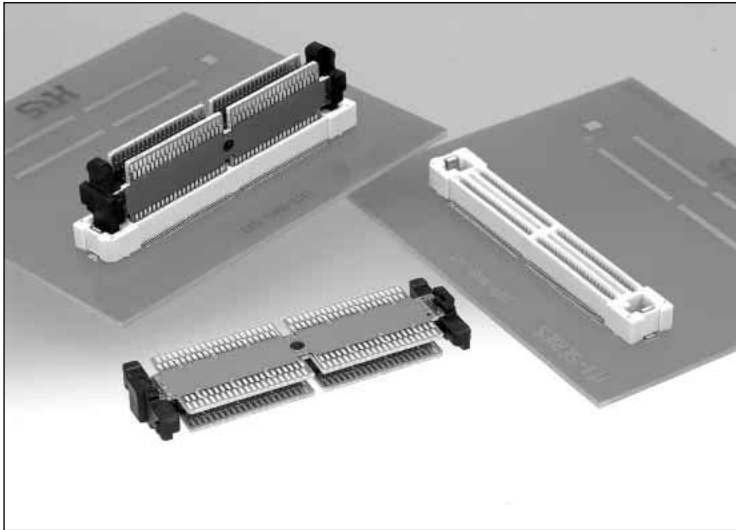

Receptacle (2 required)

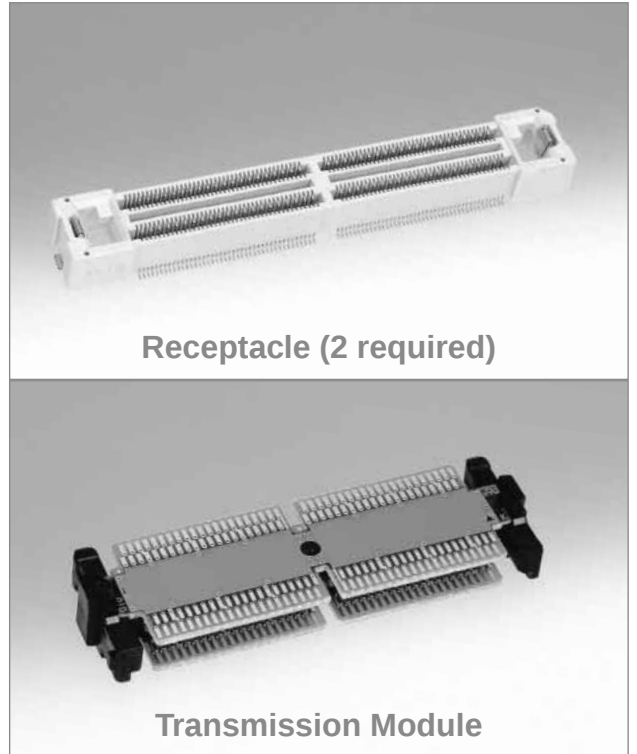

Transmission Module

IT1 Series Outline

High-speed matched-impedance parallel board-to-board connector designed for applications requiring board-to-board spacing with transmission speeds exceeding 1GHz. The connection system has matched impedance of 50 ohm or can be customized. Contacts are on 0.5mm pitch.

■ Features

1. Impedance Matching using a 4-Layer Board

The innovative transmission module uses PC boards with a strip line design of transmission lines, providing matched impedance of 50 ohms, for standard product.

2. Supports Multiple Connectors per board

Designed with a tolerance of $\pm 0.2\text{mm}$ for both the X and Y-axis. The three-piece structure and the $\pm 0.2\text{mm}$ tolerance allows 3 or more IT1's to be mounted on a single board.

3. Customized Board-to-Board Distance

Board-to-board distance can be customized, from 16mm to 40mm.

Ground lines or additional traces can be added to support high level, high speed transmission or mixed power/signal applications.


4. Signal to Ground Ratio

The standard signal-to-ground ratio is 10:2, which makes reliable matching of the characteristic impedance of each transmission line. This ratio also can be customized.

5. Contact Reliability

Use of double contact points on each of the contacts assures highly reliable performance.

● Connection Cross-Sectional Diagram

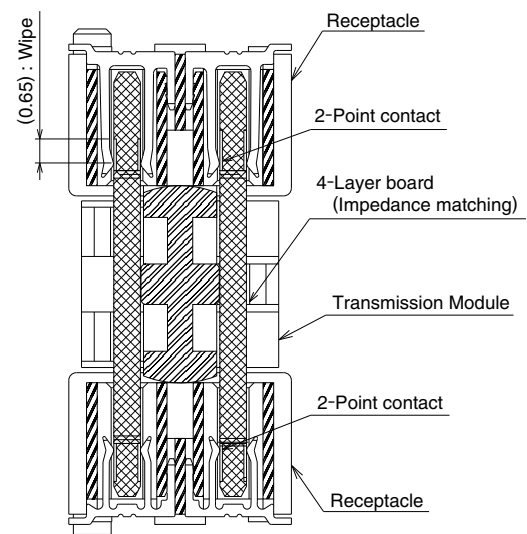

■ Applications

Routers, servers, base stations and other telecommunication equipment.

■Product Specifications

Rating	Current rating	0.4 A (Note 1)	Operation Temperature Range	-55℃ to +85℃	Storage Temperature Range	-10℃ to +60℃ (Note 2)
	Voltage rating	50V AC	Operation Humidity Range	Relative humidity 95% max. (No condensation)	Storage Humidity Range	40% to 70% (Note 2)

Item	Specification	Conditions
1. Insulation resistance	100 M ohms min.	Measured at 100V DC
2. Withstanding voltage	No flashover or insulation breakdown	150 V AC/one minute
3. Contact resistance	100 m ohms max.	Measured at 100 mA
4. Vibration	No electrical discontinuity of 1 μ s or more. No damage, cracks, or parts dislocation.	Frequency of 10 to 55 Hz, 0.75mm single amplitude, for 10 cycles in each of 3 directions
5. Shock	No electrical discontinuity of 1 μ s. min. No damage, cracks, or parts dislocation	Acceleration of 490 m/s ² , 11 ms duration, sine half-wave waveform, 3 cycles in each of the 3 axis.
6. Humidity	Contact resistance: 110 m ohms max. Insulation resistance: 100 M ohms min. No damage, cracks, or parts dislocation	96 hours/40℃/ humidity of 90% to 95%
7. Temperature cycle	Contact resistance: 110 m ohms max. Insulation resistance: 100 M ohms min. No damage, cracks, or parts dislocation	Temperature: -55℃→ +15℃ to +35℃→ +85℃→ +15℃ to +35℃ Duration: 30 → 2 to 3 → 30 → 2 to 3 (Minutes) 5 cycles
8. Durability (insertion/ withdrawal)	Contact resistance: 110 m ohms max. No damage, cracks, or parts dislocation.	20 cycles
9. Resistance to Soldering Heat	No deformation of components affecting performance.	Reflow: At the recommended temperature profile Manual soldering: 350℃ for 3 seconds

Note1: If the connector is going to be used at a current in excess of the 0.4 A, please contact your Sales Representative.

Note2: The term "storage" refers to products stored for long period of time prior to mounting and use. Operating Temperature Range and Humidity range covers non- conducting condition of installed connectors in storage, shipment or during transportation.

Note3: Information contained in this catalog represents general requirements for this Series. Contact us for the drawings and specifications for a specific part number shown.

■Material

Receptacles

Part	Material	Finish	Remarks
Insulator	LCP	Color : Beige	UL94V-0
Contacts	Phosphor bronze	Gold plating	—
Metal fittings	Phosphor bronze	Tin plating	—

Transmission Module

Part	Material	Finish	Remarks
Insulator	PBT	Color : Black	UL94V-0
Board	FR-4	Contact portion : Gold plating	—

■Ordering information

Receptacles

IT 1 # - * S - SV (* *)

① ② ③ ④ ⑤ ⑥



Transmission Module

IT 1 - * P / * - *H

① ③ ④ ⑦ ⑧

① Series name	: IT1	⑤ Lead	SV : Straight SMT
② Locating Post type Blank	: With Locating Post	⑥ Packaging	Blank : Tray
A	: Without Locating Post	(25) : Tray(connectors with attached tape for a vacuum board placement)	
③ Number of contacts	: 168, 252	⑦ Number of ground contacts	: 28, 44
④ Connector	S : Receptacle Socket	⑧ Board-to-board Distance	: 19mm,23mm,30mm
	P : Transmission Plug Module		

Recommended PCB mounting pattern

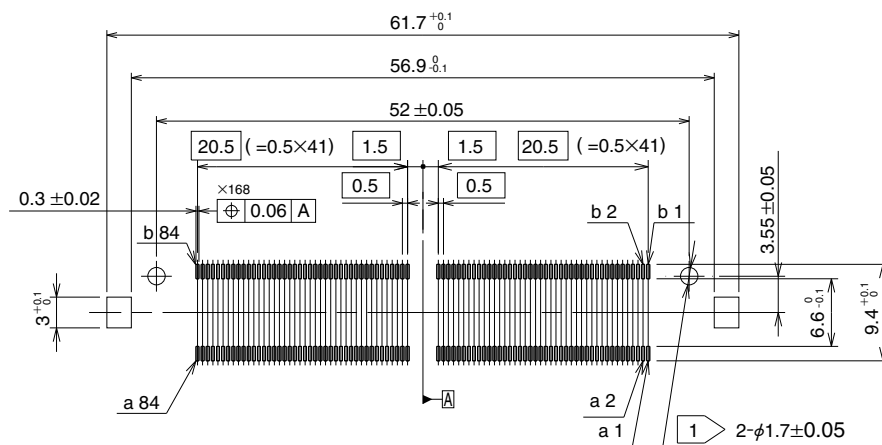


A296 HRS

Part Number	CL No.	Locating Post Type	RoHS
IT1-252S-SV	641-0003-3	With Locating Post	YES
IT1A-252S-SV	641-0013-7	Without Locating Post	

1 Not required for products without locating Post.


■Transmission Module - 168 Contacts

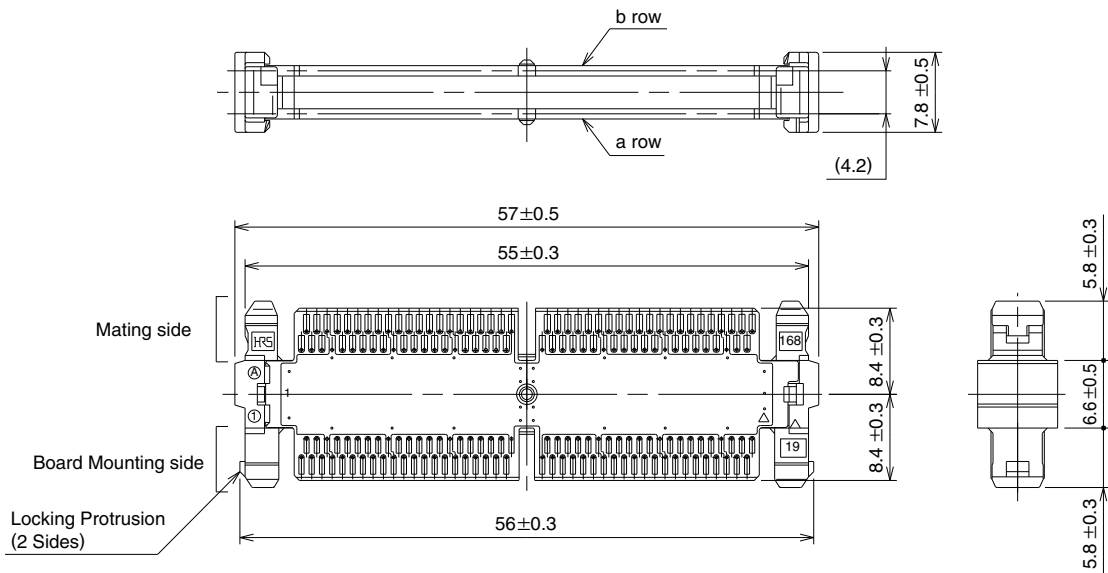

Part Number	CL No.	Board-to-board Distance	A	B	C	RoHS
IT1-168P/28-19H	641-0192-8	19mm	8.4	8.4	6.6	YES
IT1-168P/28-30H	641-0303-7	30mm	13.9	13.9	17.6	

■Connection Table


The connection table indicates contact numbers in the mated condition,as illustrated in Fig. 1.

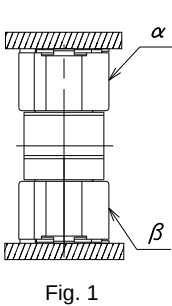

a row				b row			
	α - β		α - β		α - β		α - β
Signal	a 1 - a84	Signal	a44 - a41	Signal	b 1 - b84	Signal	b44 - b41
	a 2 - a83				b 2 - b83		
	a 3 - a82				b 3 - b82		
	a 4 - a81				b 4 - b81		
	a 5 - a80		a53 - a32		b 5 - b80		b53 - b32
Ground	a 6 - a79	Ground	a54 - a31	Ground	b 6 - b79	Ground	b54 - b31
	a 7 - a78		a55 - a30		b 7 - b78		b55 - b30
Signal	a 8 - a77	Signal	a56 - a29	Signal	b 8 - b77	Signal	b56 - b29
	a17 - a68		a65 - a20		b17 - b68		b65 - b20
Ground	a18 - a67	Ground	a66 - a19	Ground	b18 - b67	Ground	b66 - b19
	a19 - a66		a67 - a18		b19 - b66		b67 - b18
Signal	a20 - a65	Signal	a68 - a17	Signal	b20 - b65	Signal	b68 - b17
	a29 - a56		a77 - a 8		b29 - b56		b77 - b 8
Ground	a30 - a55	Ground	a78 - a 7	Ground	b30 - b55	Ground	b78 - b 7
	a31 - a54		a79 - a 6		b31 - b54		b79 - b 6
Signal	a32 - a53	Signal	a80 - a 5	Signal	b32 - b53	Signal	b80 - b 5
			a81 - a 4				b81 - b 4
			a82 - a 3				b82 - b 3
			a83 - a 2				b83 - b 2
Ground	a41 - a44		a84 - a 1		b41 - b44		b84 - b 1
	a42 - a43				b42 - b43		
	a43 - a42				b43 - b42		

■Transmission Module - 252 Contacts

●2-row type

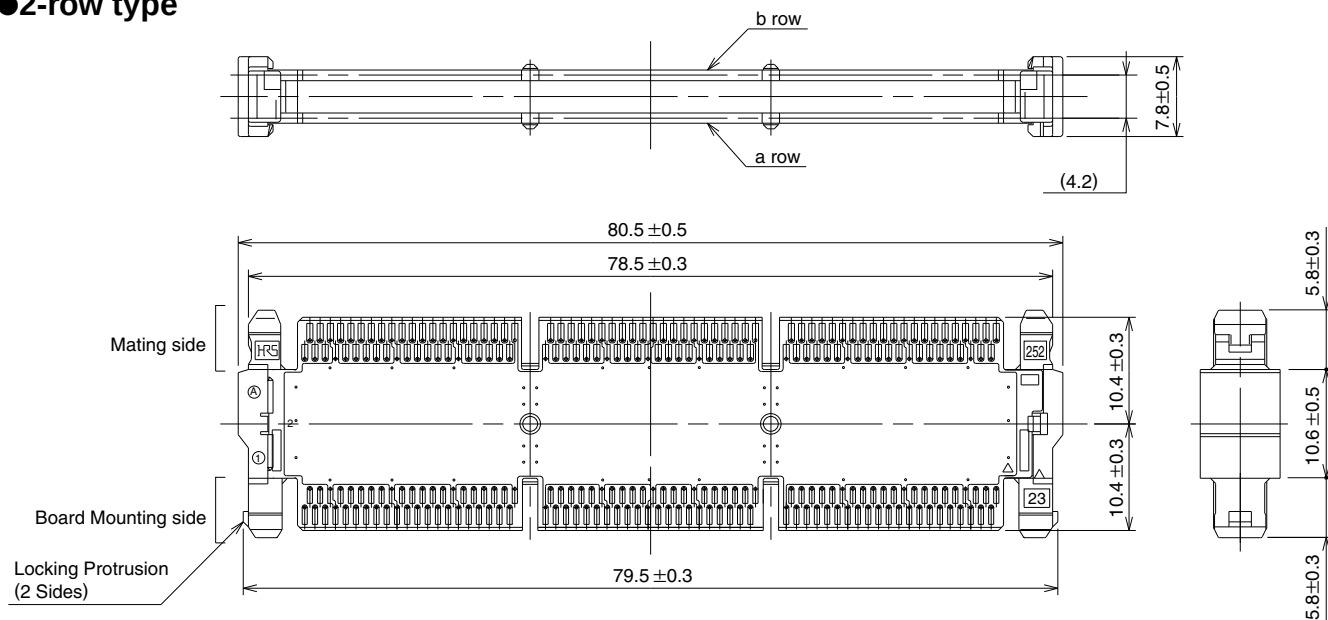

Part Number	CL No.	Board-to-board Distance	A	B	C	RoHS
IT1-252P/44-23H	641-0231-8	23mm	10.4	10.4	10.6	YES
IT1-252P/44-30H	641-0304-0	30mm	13.9	13.9	17.6	

■Connection Table


The connection table indicates contact numbers in the mated condition, as illustrated in Fig. 1.

Fig. 1: Cross-section diagram of the connector showing the mating of the a row and b row contacts. The diagram shows the a row contacts (α - β) and the b row contacts (α - β) with their respective signal and ground connections.

a row						b row					
α - β		α - β		α - β		α - β		α - β		α - β	
Signal	a 1 - a126	Signal	a44 - a83	Signal	a86 - a41	Signal	b 1 - b126	Signal	b44 - b83	Signal	b86 - b41
Ground	a 5 - a122	Ground	a53 - a74	Ground	a95 - a32	Ground	b 5 - b122	Ground	b53 - b74	Ground	b95 - b32
Signal	a 6 - a121	Signal	a54 - a73	Signal	a96 - a31	Signal	b 6 - b121	Signal	b54 - b73	Signal	b96 - b31
Ground	a 7 - a120	Ground	a55 - a72	Ground	a97 - a30	Ground	b 7 - b120	Ground	b55 - b72	Ground	b97 - b30
Signal	a 8 - a119	Signal	a56 - a71	Signal	a98 - a29	Signal	b 8 - b119	Signal	b56 - b71	Signal	b98 - b29
Ground	a17 - a110	Ground	a62 - a65	Ground	a107 - a20	Ground	b17 - b110	Ground	b62 - b65	Ground	b107 - b20
Signal	a18 - a109	Signal	a63 - a64	Signal	a108 - a19	Signal	b18 - b109	Signal	b63 - b64	Signal	b108 - b19
Ground	a19 - a108	Ground	a64 - a63	Ground	a109 - a18	Ground	b19 - b108	Ground	b64 - b63	Ground	b109 - b18
Signal	a20 - a107	Signal	a65 - a62	Signal	a110 - a17	Signal	b20 - b107	Signal	b65 - b62	Signal	b110 - b17
Ground	a29 - a98	Ground	a71 - a56	Ground	a119 - a 8	Ground	b29 - b98	Ground	b71 - b56	Ground	b119 - b 8
Signal	a30 - a97	Signal	a72 - a55	Signal	a120 - a 7	Signal	b30 - b97	Signal	b72 - b55	Signal	b120 - b 7
Ground	a31 - a96	Ground	a73 - a54	Ground	a121 - a 6	Ground	b31 - b96	Ground	b73 - b54	Ground	b121 - b 6
Signal	a32 - a95	Signal	a74 - a53	Signal	a122 - a 5	Signal	b32 - b95	Signal	b74 - b53	Signal	b122 - b 5
Ground	a41 - a86	Ground	a83 - a44	Ground	a126 - a 1	Ground	b41 - b86	Ground	b83 - b44	Ground	b126 - b 1
Signal	a42 - a85	Signal	a84 - a43	Signal		Signal	b42 - b85	Signal	b84 - b43	Signal	
Ground	a43 - a84	Ground	a85 - a42	Ground		Ground	b43 - b84	Ground	b85 - b42	Ground	

◆IT1 Series Extraction Tool

Part Number	CL No.	Remarks	RoHS
IT1-PICKER(1)	641-1001-3	2-piece Package	YES

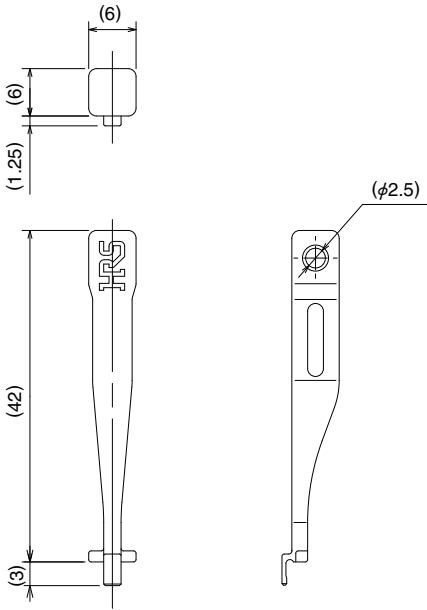

Installation and Use Instruction Manual

Table of Contents


1. System Components	A302
● Receptacles	
● Transmission Module Assembly	
● Extraction Tool	
2. Recommended Design Guidelines	A303
2-1 Recommended Solder Land Pattern	
2-2 Board-to-Board Spacer Heights	
3. Connector Placement	A304
3-1 Receptacle Packaging Types	
3-2 Receptacle Vacuum Pick-and-Place Areas	
3-3 Receptacle Board Placement	
3-4 Recommended Reflow Conditions	
3-5 Solder Repairs	
4. Mating Procedure	A307
5. Un-mating of Connectors	A308
6. Removal of the Transmission Module from the stationary side. ..	A309
7. Precautions When Mounting Multiple Connectors ..	A310
● Allowable Amount of Misalignment	
● Recommended Positional Location	

◆Connector Handling Precautions

1. System components


■Receptacles

- **Contacts**
Row A and row B contacts are arranged alternately starting with No.1 in row B. Placement on board is polarized.
- **Metal Fittings**
Permanently inserted to provide lock with the Transmission Module and additional solder areas with the PCB.
- **Insulator body**
Injection molded single unit provides protection and correct self-alignment of all components.

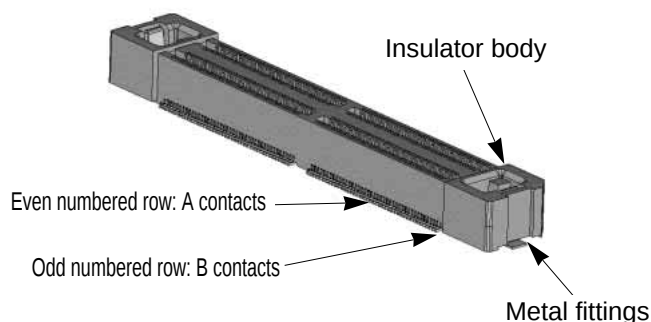


■Transmission Module Assembly

- Each Module has stationary side and a mating/un-mating side.
- When mounting multiple connectors, please keep uniform orientation of the stationary side.
- Transmission printed circuit boards used in the module are based on JIS standards and quality standards applicable to memory modules.

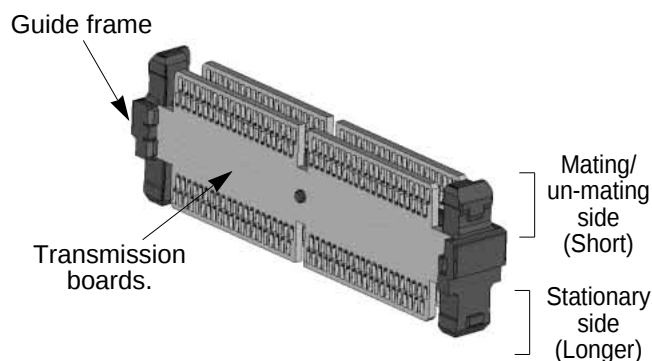


■Extraction Tool

- Used to release the transmission module from the stationary receptacle.

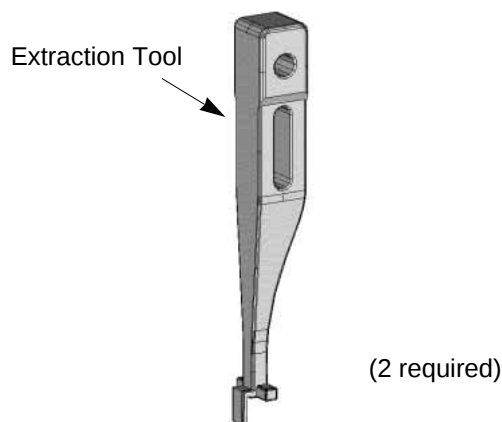

Fully Connected Condition

The interconnection package consists of 3 main sub-assemblies: Two receptacles and the Transmission Module. The transmission module, held securely by the guide frame has a mating/un-mating side and a stationary side. Once the stationary side is inserted in the receptacle, it can not be removed without the use of extraction tool. The mating/un-mating side allows repeated re-insertion of the receptacle on this side only.

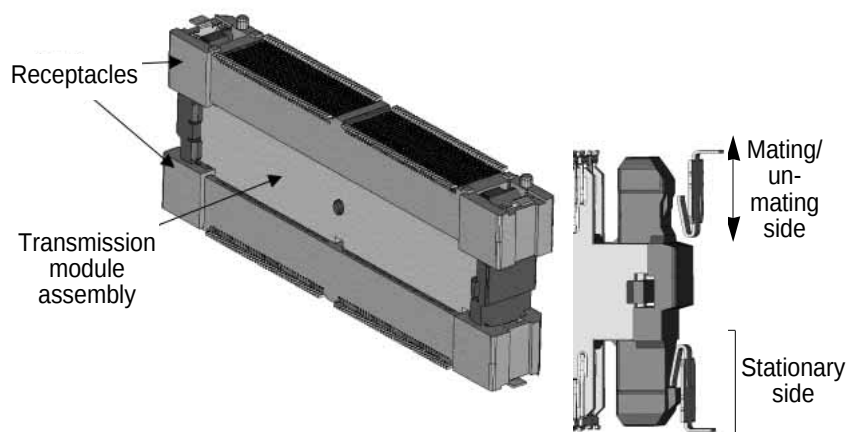

2. Recommended Design Guidelines

2-1 Solder Land Pattern

When placing the receptacles on the Printed Circuit Boards using automatic mounting equipment or manually, assure that the correct diameters of the holes (Fig. 1) are through the entire thickness of the board.

◆ Locating post hole diameter ◆

The contacts of receptacle assembly are exposed on the bottom surfaces. The exposed areas of the contacts are a distance of 0.25 mm minimum from the surface of the Printed Circuit Board, on which the receptacle assembly is placed (Fig.2). Consideration should be taken not to place or assure insulation of conductive traces under the receptacle assemblies.

Refer to the separate drawings for recommended solder land pattern dimensions of the receptacle, and signals and ground connection diagram of the transmission module.

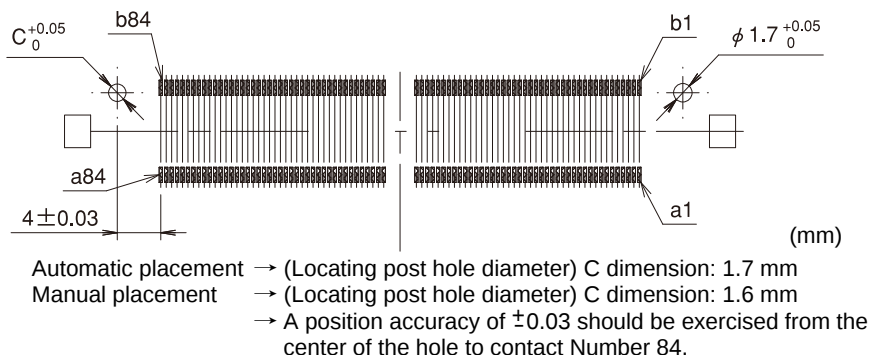


Fig. 1 IT1-168S-SV Recommended Solder Land Pattern

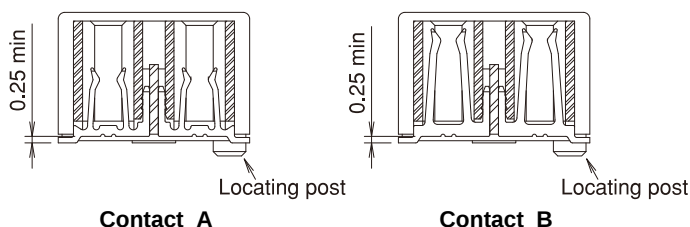


Fig. 2 Cross section of IT1 receptacle

2-2 Board-to-Board Spacer heights

The two parallel boards connected by the IT1 connectors should be fastened to additional spacers between them.

Fig. 3 indicates the connector height tolerance and the spacer's height.

When designing the spacer's height, consideration should be given to the solder paste thickness and any other features, which may affect the full mating of the connector.

Fig. 3 indicates design dimensions for the 19 mm board-to-board distance.

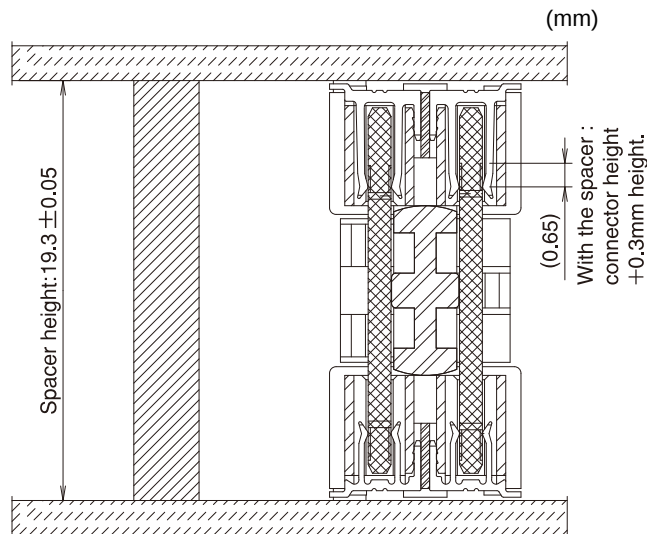



Fig. 3

3. Connector Placement


3-1 Packaging Types

- Two types of packaging are available: semi-hard tray and hard tray. Customers may specify a packaging type suitable for their automatic placement machines.
- * Refer to the separate drawings for the detailed dimensions of the trays.

- **Semi-hard tray packaging**
168 contacts receptacle: 40 pieces per tray
252 contacts receptacle: 30 pieces per tray


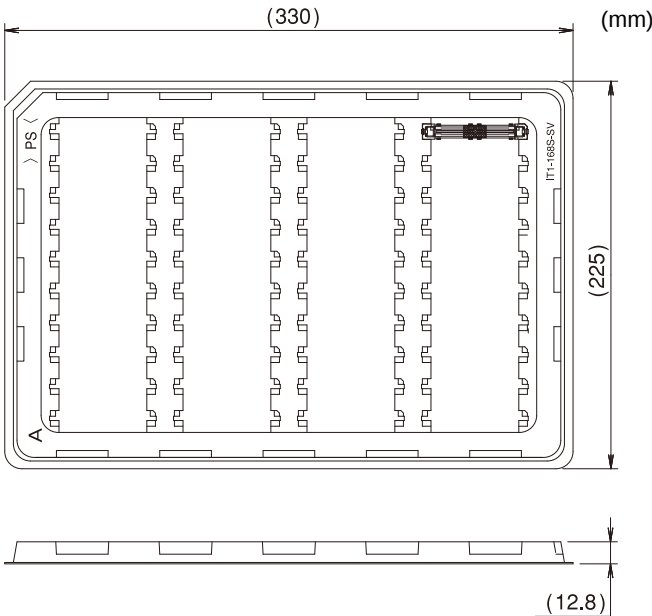


- **Hard tray packaging**
168 contacts receptacle: 24 pieces per tray
252 contacts receptacle: 16 pieces per tray

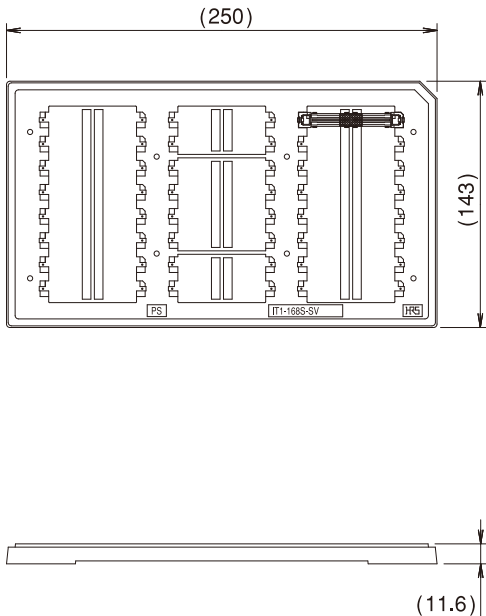

3-2 Automatic placement - Vacuum Pick-and-Place Areas

- Specify "Vacuum Pick-up Tape Specification".
The area and position of the pick-and-place surface are indicated in the diagrams below.

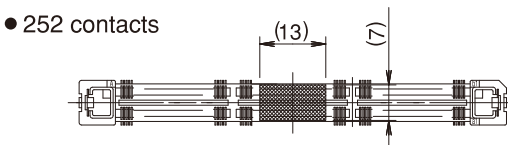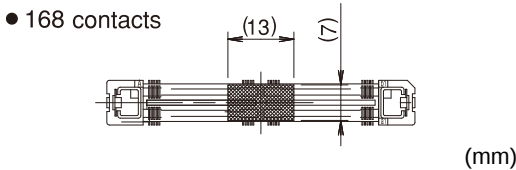

3-3 Receptacle Board Placement

- When using automatic placement equipment, verify the packaging type and the Pick-and-place areas.
- When placing manually, pay attention to the possibility of positional shift. Ref. Fig. 4.
- * When placing multiple connectors, to assure positional accuracy, it is advised to use automatic placement equipment.

◆Precautions for Manual Placement◆

The orientation posts serve as a prevention measure to avoid incorrect placement of the receptacle assemblies on the board. The contact terminals must be placed correctly over the corresponding solder pad as shown on Fig. 4-1.

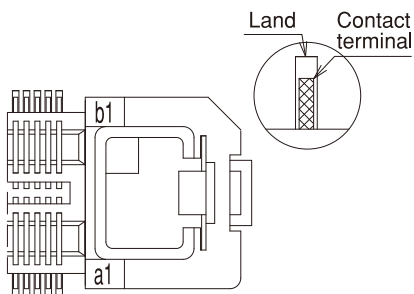


Fig. 4-1 = **Correct**

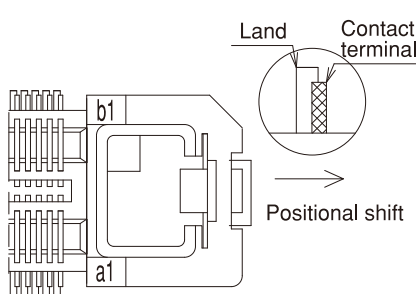


Fig. 4-2 = **Incorrect**


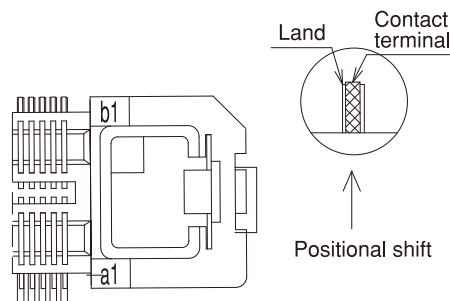


Fig. 4-3 = **Incorrect**

3-4 Recommended Reflow Conditions

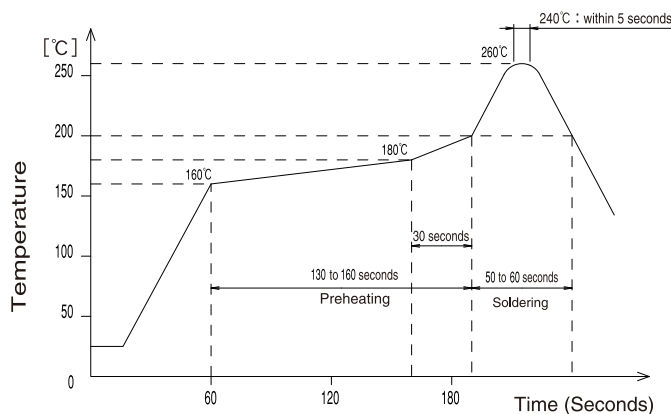

Applicable Conditions

- Reflow system : IR reflow
- Solder : Paste type (Sn:96.5, AG:3.0, Cu:5.0)
(Flux content 9wt%)
- Test board : Glass epoxy (FR-4), 85mm x 110mm x 1.6 mm
- Metal mask thickness : 0.15 mm

* Shown recommended temperature profile.

3-5 Solder Repairs

Assure that flux is not reaching the contact areas of the connector.
Wash the assembly as recommended below.

◆Cleaning Conditions◆
<Organic Solvent Cleaning>

Solvent Type	Normal temperature	Heated
IPA (Isopropyl alcohol)	Good	Good

<Water Based Cleaning>
When using water based cleaning agents (e.g., terpene, and alkali saponifiers), select the cleaning agent based on the documentation issued by the various manufacturers, which describes its effects on metals and resins. Care should be taken not to leave moisture on the connectors.

<Cleaning Precautions>
Residual flux or cleaning agent remaining on the connectors when cleaning with organic solvents or water based cleaners may cause deterioration of the electrical performance. It is important to check that a thorough washing has been performed.

May.1.2020 Copyright 2020 HIROSE ELECTRIC CO., LTD. All Rights Reserved.

4. Mating Procedure

Follow the procedure described below.


- Note:
- The transmission module must be fully inserted into receptacle assembly already placed and soldered to a board.
 - The Transmission Module cannot be exposed to heat temperatures of the soldering process.

Step 1

Receptacle Placement on the board – stationary side

Assure that the orientation posts are aligned with the holes on the board.

When specifying receptacle assemblies without the orientation posts exercise extra caution to assure correct orientation and connection with the solder pads.

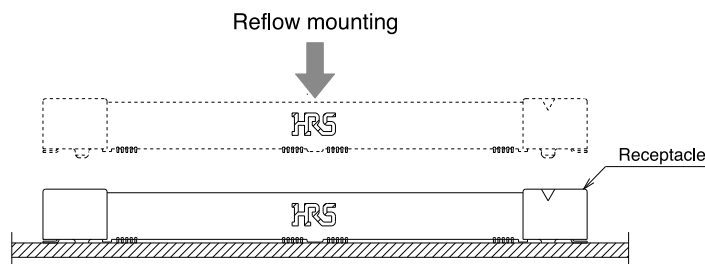


Step 2

Insertion of the Transmission Module

Fully insert the Transmission Module in the board-installed receptacle assembly.

It is critical that the insertion is done straight and uniformly.

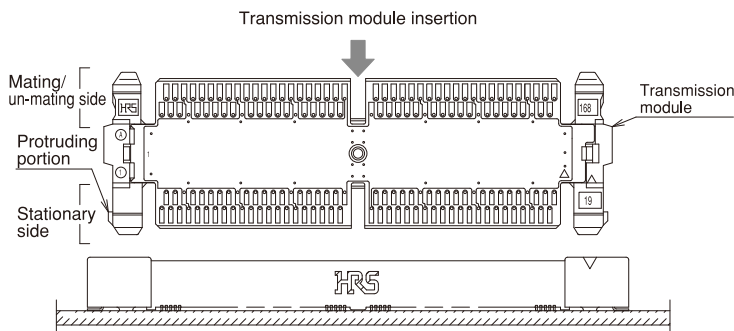


Step 3

Mating/un-mating


Assure that the receptacle assembly is correctly aligned with the Transmission Module.

Fully insert the receptacle assembly on the Transmission Module.

It is critical that the insertion is done straight and uniformly.

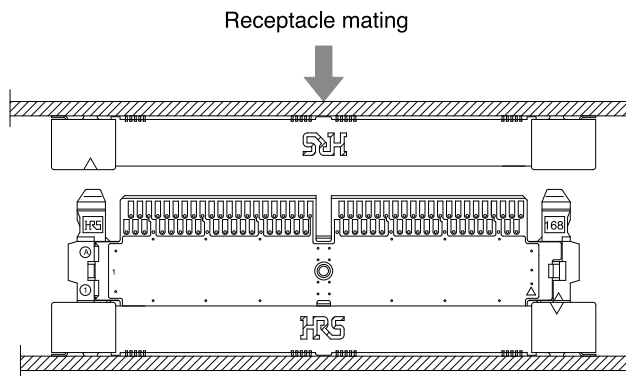


Step 4

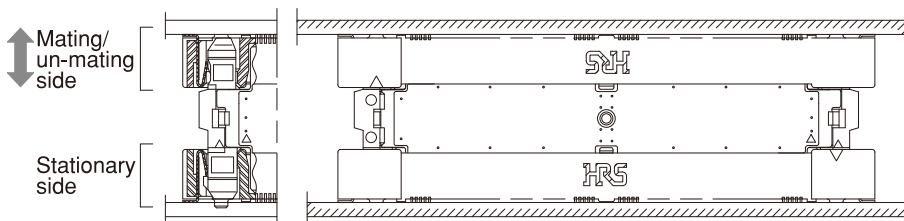

5. Un-mating of Connectors

Recommended Method

- Pull uniformly straight up.

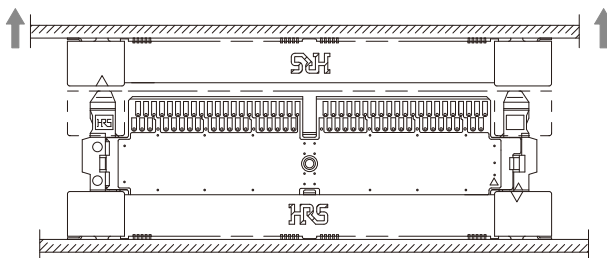



Prohibited un-mating Methods



- Do not lift by one side only.



- Do not wiggle side-to-side.

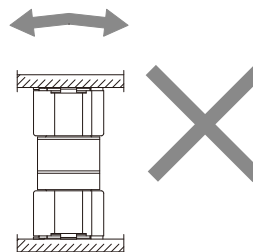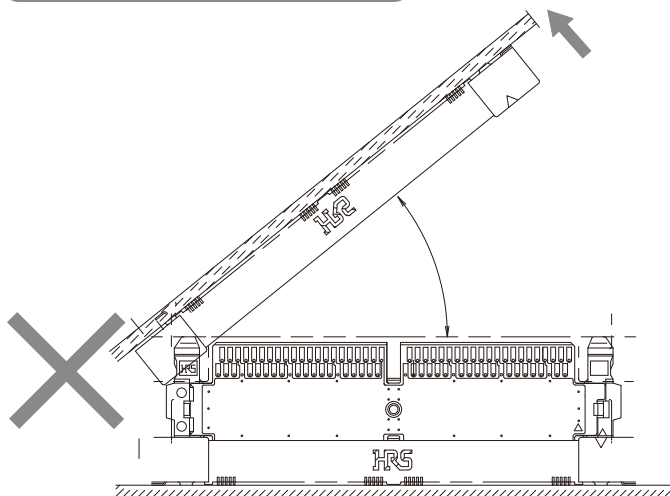

- Do not mate/un-mate when connections are under power.

6. Removal of the Transmission Module - stationary side

- Requires use of dedicated extraction tool. Two are required.

Step 1

- Fully insert the tools into each end of the receptacle assembly (Fig. 1) assuring that they will be over the hold areas of the Transmission Module frame. Ref. Fig. 2

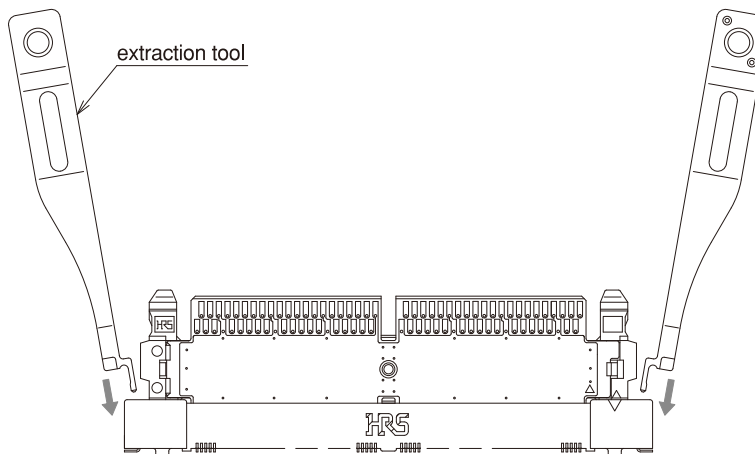


Fig. 1

Step 2

Pull out the transmission module holding the tools straight.


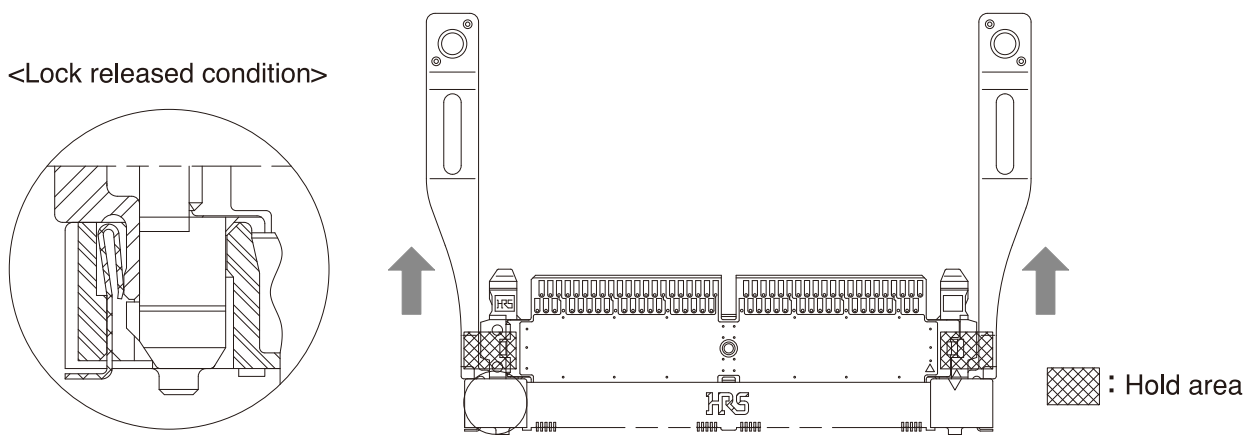


Fig. 2

extraction tool Insertion Area

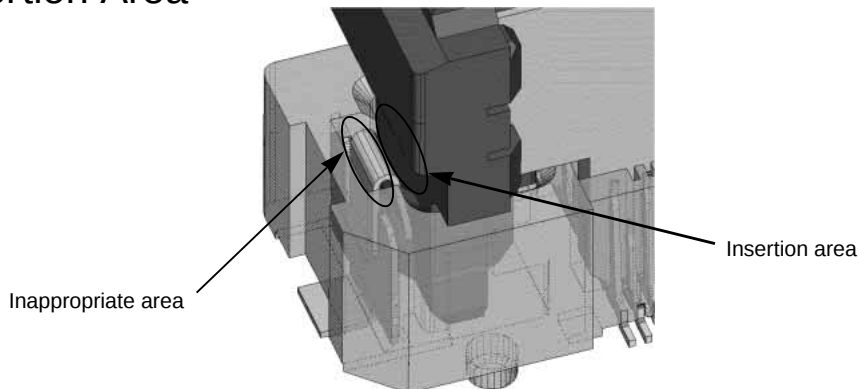


7. Precautions When Mounting Multiple Connectors

Note: Observe the requirements as listed in paragraph 7-1 and 7-2.

The mating/un-mating forces will increase with use of multiple assemblies. It is recommended that a dedicated tooling is used for mating / un-mating of multiple connector assemblies in a single operation.

7-1 Allowable Amount of Misalignment

Maximum allowable misalignment in X and Y directions is ± 0.2 mm total.
Refer to the drawings below.

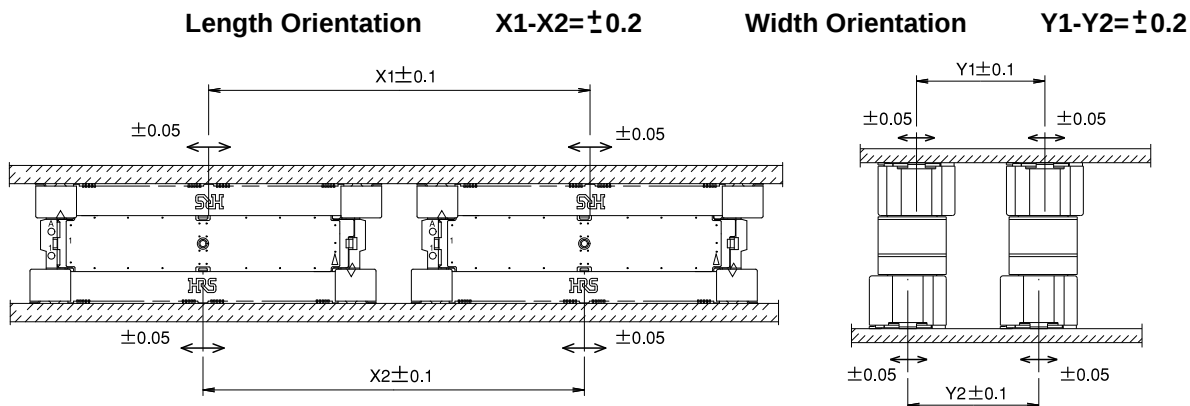

7-2 Recommended Connector Placement

It is recommended to leave min. of 30 mm space between the adjacent connector assemblies.



7-3 Examples of Prohibited Placement Positions

To assure reliability of solder joints and mating/ un-mating without damage,
DO NOT PLACE MULTIPLE CONNECTORS as illustrated below.

